

OPTIONS FOR ABB DRIVES

# ACS-AP-I, -S, -W and ACH-AP-H, -W Assistant control panels

## User's manual





# ACS-AP-I, -S, -W and ACH-AP-H, -W Assistant control panels

User's manual

Table of contents





# Table of contents

---

## **1 Introduction to the manual**

What this chapter contains .....	9
Applicability .....	10
Compatibility .....	10
Safety .....	11
Intended audience .....	11
Related manuals .....	11

## **2 Installation and start-up**

What this chapter contains .....	13
Installation .....	14
First start-up .....	15

## **3 Control panel overview**

What this chapter contains .....	17
Display, keys and parts .....	18
Display .....	19
Keys .....	21
Left softkey .....	21
Right softkey .....	21
Arrow keys .....	21
Help .....	21
Start and Stop .....	21
Off .....	21
Hand .....	21
Auto .....	22
Loc/Rem .....	22
Key shortcuts .....	22
Control panel and panel platform/holder LEDs .....	23
USB connector .....	23
RJ-45 connector .....	24
Type code label on the panel .....	24
Type code label on the panel package .....	24
Battery cover .....	25
Wireless interface .....	25

## **4 Basic operation**

What this chapter contains .....	27
User interface overview .....	27
Control panel navigation .....	28
Navigation memory .....	28
Home view .....	29
Navigating in the Home view .....	29
Help .....	29

---













Common user tasks ..... 30

- Basic operation of the drive ..... 30
- Parameters ..... 30
- System information and help ..... 30
- Faults and warnings ..... 30
- Basic settings and assistants ..... 31
- Backups ..... 31

**5 Functions in the main Menu**

What this chapter contains ..... 33

Menu ..... 34

- Navigating in the Menu ..... 34
-  Parameters ..... 35
  - Complete list ..... 35
  - By function ..... 35
  - Favorites ..... 35
    - Editing the list of favorites ..... 36
  - Modified ..... 36
  - Adding parameters to the Home view ..... 36
  - Editing parameters ..... 37
  - Editing numeric parameters ..... 37
  - Editing selection list parameters ..... 37
  - Editing bit-field parameters ..... 39
  - Editing texts ..... 40
  - Resetting counters ..... 40
-  Assistants ..... 41
  - Launching an assistant ..... 41
  - Generating a QR code ..... 42
-  Energy efficiency ..... 42
-  Event log ..... 43
-  History graphs ..... 43
  - Trends ..... 43
  - Load profile ..... 44
-  Backups ..... 44
  - Creating a parameter backup ..... 45
  - Restoring a parameter backup ..... 45
-  System info ..... 46
-  Settings ..... 48
  - Primary settings ..... 49
-  I/O ..... 50
-  Diagnostics ..... 50

**6 Functions in the Options menu**

What this chapter contains ..... 53

Options menu ..... 53

- Setting the reference ..... 54
- Editing the contents of the Home view ..... 54



**7 Control of multiple drives**

What this chapter contains .....	59
Connecting multiple drives to a control panel .....	59
Selecting drive menu .....	60
Selecting a drive .....	60
Panel features with multiple drives .....	61
Panel views .....	61
The Help page .....	61
Graph data .....	61
Backups .....	61
Customized content .....	61
Assistants .....	61
Faults and warnings with multiple drives .....	62
Faults and warnings in the currently selected drive .....	62
Faults and warnings in other drives .....	62

**8 Fault tracing**

What this chapter contains .....	63
Identifying error and warning messages .....	63
Faults .....	65
Warnings .....	65

**9 Maintenance**

What this chapter contains .....	67
Removing the control panel cover .....	68
Cleaning the control panel .....	68
Cleaning the connectors .....	68
Replacing the battery .....	68
Control panel software updates .....	69
Recycling instructions and environmental information .....	69

**10 Panel-to-PC USB connection**

What this chapter contains .....	71
USB connection .....	71
Connecting control panel to PC USB .....	72
Connecting a PC tool to a drive through the control panel .....	73
Connecting in local control mode .....	73
Connecting in remote control mode .....	73
Transferring files between the control panel and a PC .....	73

**11 Technical data**

What this chapter contains .....	75
Connectors .....	75
Display .....	75
Battery .....	75
Dimensions and weight .....	76
Degrees of protection .....	76
Materials .....	76
Environmental limits .....	77
IEC compliance .....	77

---



8 *Table of contents*

LCD specifications ..... 77

Bluetooth interface ..... 77

Bluetooth encryption ..... 78

Bluetooth radio frequency exposure ..... 78

    Bluetooth (BT) ..... 78

    Bluetooth Low Energy (BLE) ..... 78

FCC and Industry Canada certifications ..... 78

    FCC ID: 2AFNGAPWSERIES ..... 78

    IC: 20555-APWSERIES ..... 79

Markings ..... 79

Disclaimers ..... 79

    Generic disclaimer ..... 79

    Cybersecurity disclaimer ..... 80

*Further information*





A large, light gray square with rounded corners, centered on the page. Inside the square, the number '1' is written in a large, bold, black font.

# Introduction to the manual

---

## **What this chapter contains**

This chapter describes the applicability, compatibility, intended audience and the contents of this manual.

---

## Applicability

This manual applies to the following panel types and their versions:

Control panel type	ACS-AP-I and ACS-AP-S	ACS-AP-W	ACH-AP-H	ACH-AP-W
Hardware version	C or later	A or later	C or later	A or later
Software version	4.61 or later	5.01 or later	5.00 or later	5.40 or later

You can also view panel details in the panel itself using either of the two methods:

- With panel still not powered, press and hold (?) button, then power up the panel through USB or drive.

Control panel	
Product type:	ACS-AP-I
HW version:	D
FW version:	GPAPI v5.80

or

- With panel powered up, go to **Menu** → **System info** → **Control panel**.

Local	ACS480	-1.5 rpm
Control panel		
Product type:	ACS-AP-I	
HW version:	D	
FW version:	Flash AT32	
Serial number:	GPAPI v5.80	
Manufacturing date:	D4111670SB	
Back	31.03.2014	
	14:02	

**Note:** The images and instructions in this manual are examples, each based on a specific control panel and drive type combination. The details may vary with different control panels or drive types.

## Compatibility

The following drive(s) are compatible with these panel types.

Control panel type	ACS-AP-I	ACS-AP-S	ACS-AP-W	ACH-AP-H, ACH-AP-W
Drive	ACS380, ACS480, ACS530, ACS560, ACS580, ACQ580, ACS860, ACS880	ACS380, ACS480, ACS530, ACS560, ACS580	ACS380, ACS480, ACS530, ACS560, ACS580, ACQ580, ACS860, ACS880	ACH480, ACH580, ACQ580

**Note:** This table may not be comprehensive. See the appropriate drive manual for more details.

## Safety

Follow all safety instructions delivered with the drive.

## Intended audience

This manual is intended for persons who use the ACS-AP-I, ACS-AP-S, ACS-AP-W, ACH-AP-H or ACH-AP-W Assistant control panels.

## Related manuals

<b>Tool and maintenance manuals</b>	<b>Code (English)</b>
Drive composer PC tool user's manual	3AUA0000094606
<b>Option manuals and guides</b>	
ACS-AP-I, -S, -W and ACH-AP-H, -W Assistant control panels User's manual	3AUA0000085685
CDPI-01 communication adapter module User's manual	3AXD50000009929
DPMP-01 mounting platform for ACP-AP control panel	3AUA0000100140
DPMP-02/03 mounting platform for ACP-AP control panel	3AUA0000136205

You can find manuals and other product documents in PDF format on the Internet. See section Document library on the Internet on the inside of the back cover. For manuals not available in the Document library, contact your local ABB representative.

---





## Installation and start-up

---

### What this chapter contains

This chapter describes how to install and start-up the Assistant control panel for the first time.

---

## Installation

Attach the control panel directly to the drive or use a separate mounting kit (for example, for cabinet door mounting).

To attach the control panel,

1. Place its bottom end into the bottom of the slot in the drive (A).
2. Pivot the control panel and push the upper part (B) until you hear a click.



To detach the control panel,

1. Release the control panel by pressing the clip (B).
2. Pull the upper end of the control panel out of the slot in the drive.




## First start-up

To start-up the control panel for the first time, follow the instructions:

1. Obey all drive-specific safety precautions.
2. Install the control panel. See instructions in *Installation (page 14)*.
3. Power up the drive.  
The control panel start-up begins automatically. Wait until the control panel shows the language selection view.
4. Use  or  to select a language.






5. Press  to confirm your selection.  
Wait until the control panel completes uploading the language file. The progress is indicated by a progress bar.




If there is a Basic set-up assistant in the drive, or if the control panel already contains a compatible backup (or backups) that could be copied to the drive, the control panel prompts a question.

16 Installation and start-up

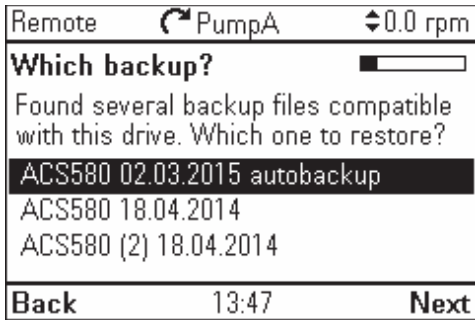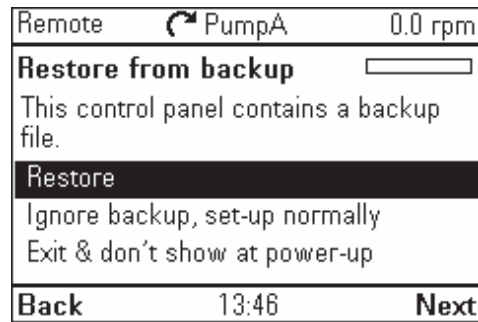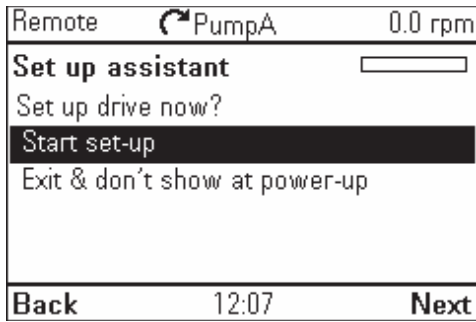

Once you are in the **Home** view, the control panel is ready for use.

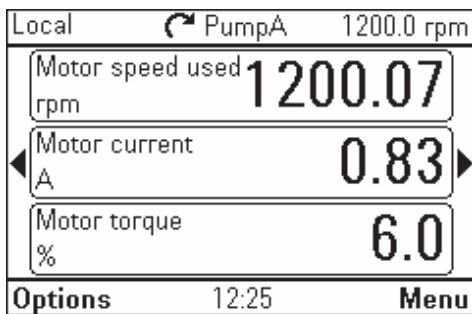



A large, light gray square with rounded corners, centered on the page. Inside the square is a large, bold, black number '3'.

# 3

## Control panel overview


---

### What this chapter contains

This chapter describes the display, keys and main parts of the Assistant control panel.

---


## Display, keys and parts

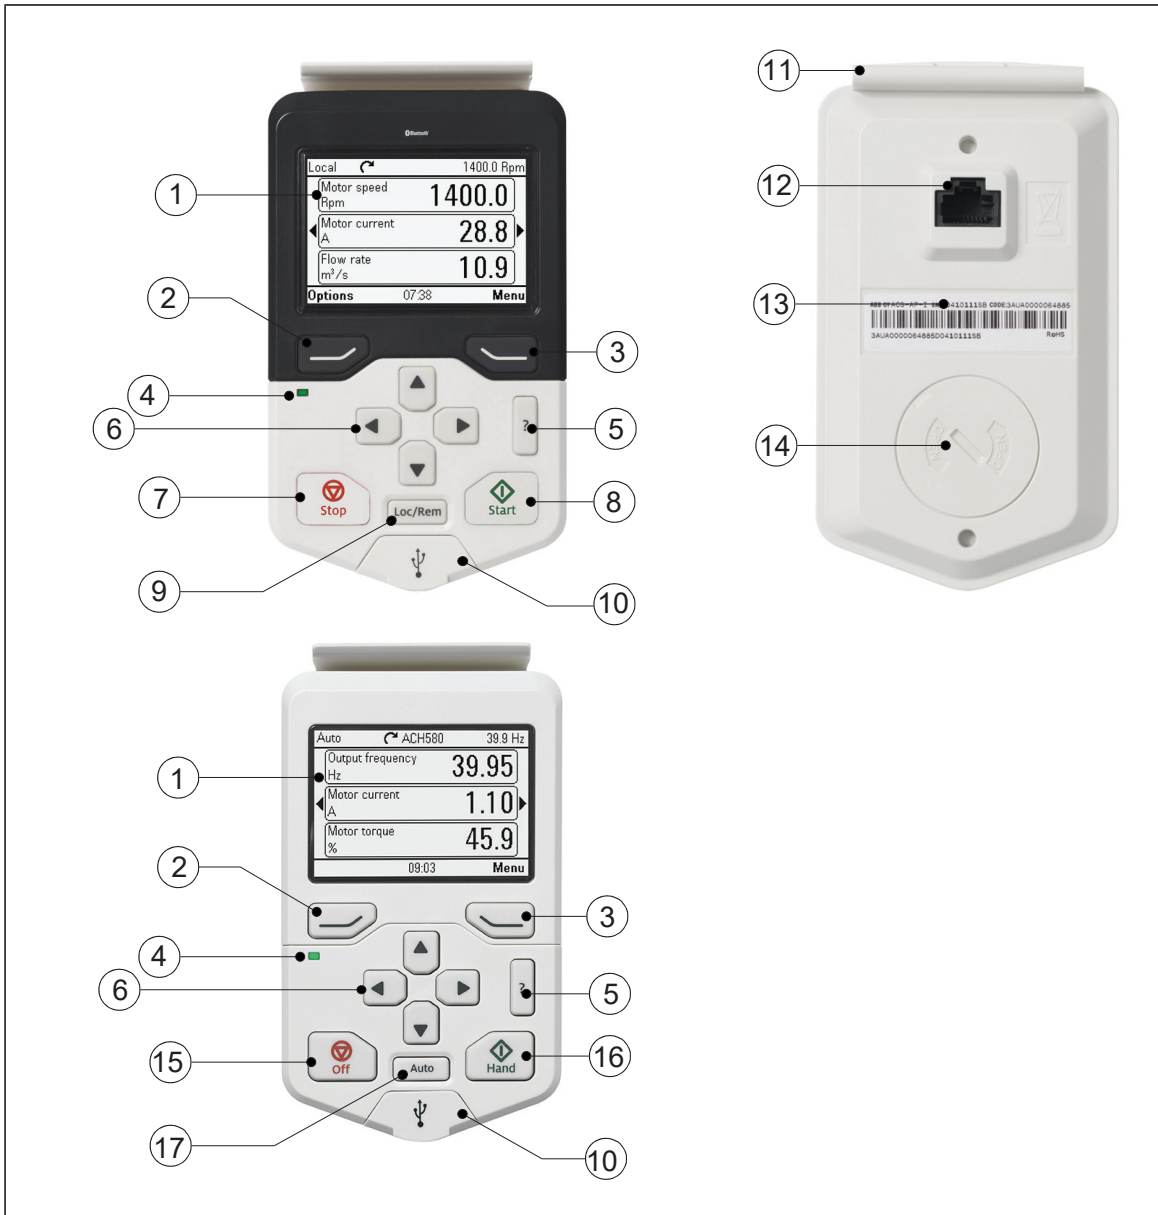

1	Display	10	USB connector
2	Left softkey	11	Clip
3	Right softkey	12	RJ-45 connector
4	Status LED	13	Type code label on the panel
5	Help	14	Battery cover
6	Arrow keys	15	Off
7	Stop (see Start and Stop)	16	Hand
8	Start (see Start and Stop)	17	Auto
9	Local/Remote (see Loc/Rem)		




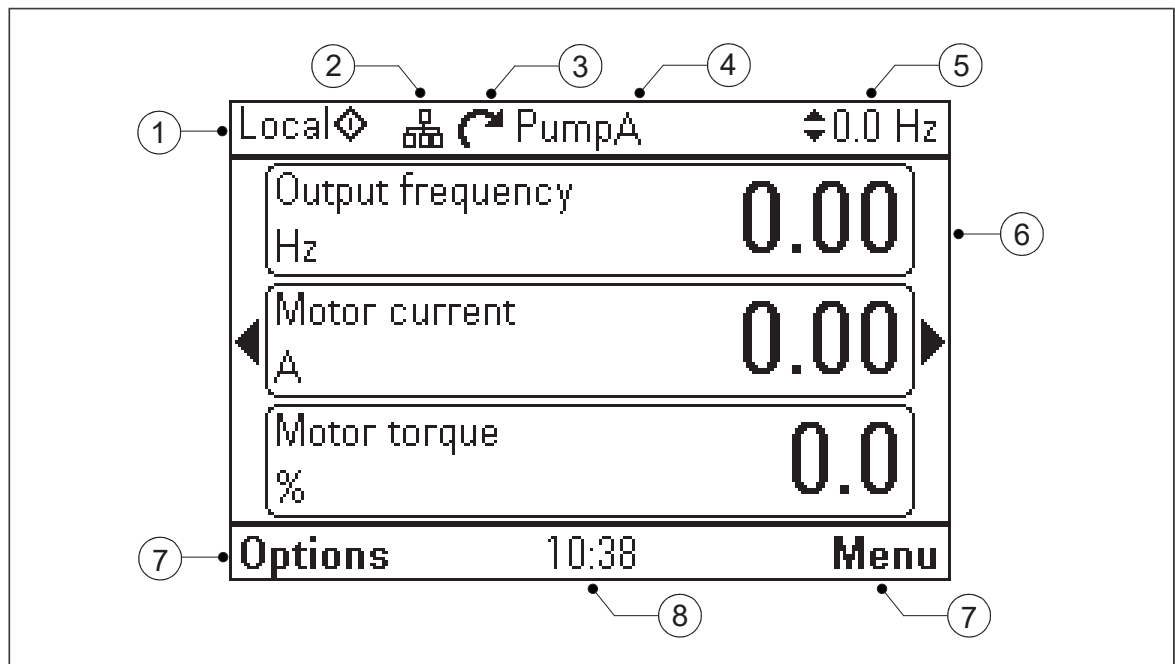


■ **Display**



  In most views, the following control panel elements are shown on the display:



1	Control location and related icons	<p>Indicates how the drive is controlled:</p> <p><b>No text:</b> The drive is in local control, but controlled from another device. The icons in the top pane indicate which actions are allowed.</p> <p><b>Local:</b> The drive is in local control, that is, controlled from the control panel.</p> <p><b>Remote:</b> The drive is in remote control, that is, controlled through I/O or fieldbus.</p>																								
2	Panel bus	<p>Indicates that there are more than one drive connected to this panel. To switch to another drive, go to <b>Options</b> → <b>Select drive</b>.</p>																								
3	Status icon	<p>Indicates the status of the drive and the motor. The direction of the arrow indicates forward (clockwise) or reverse (counter-clockwise) active reference direction.</p> <p><b>Note:</b> For non-rotating driven equipment, the numbers 1 and 0 are used to indicate that the drive is running or stopped, respectively.</p> <table border="1" data-bbox="587 1391 1444 1973"> <thead> <tr> <th>Status icon</th> <th>Animation</th> <th>Drive status</th> </tr> </thead> <tbody> <tr> <td></td> <td>-</td> <td>Stopped</td> </tr> <tr> <td></td> <td>-</td> <td>Stopped, start inhibited</td> </tr> <tr> <td></td> <td>Blinking</td> <td>Stopped, start command given but start inhibited</td> </tr> <tr> <td></td> <td>Blinking</td> <td>Faulted</td> </tr> <tr> <td></td> <td>Blinking</td> <td>Running, at reference, but the reference value is 0</td> </tr> <tr> <td></td> <td>Rotating</td> <td>Running, not at reference</td> </tr> <tr> <td></td> <td>Rotating</td> <td>Running, at reference</td> </tr> </tbody> </table>	Status icon	Animation	Drive status		-	Stopped		-	Stopped, start inhibited		Blinking	Stopped, start command given but start inhibited		Blinking	Faulted		Blinking	Running, at reference, but the reference value is 0		Rotating	Running, not at reference		Rotating	Running, at reference
Status icon	Animation	Drive status																								
	-	Stopped																								
	-	Stopped, start inhibited																								
	Blinking	Stopped, start command given but start inhibited																								
	Blinking	Faulted																								
	Blinking	Running, at reference, but the reference value is 0																								
	Rotating	Running, not at reference																								
	Rotating	Running, at reference																								

## 20 Control panel overview

4	Drive name	If a name is given, it is displayed at the top pane. By default, it is blank. You can change the name in the  <a href="#">Primary settings (page 49)</a> or  <a href="#">Settings (page 48)</a> menu.
5	Reference value	Speed, frequency and so on, are shown with its unit. For information on changing the reference value, see <a href="#">Setting the reference (page 54)</a> .
6	Content area	Displays the actual content of the view in this area. The content varies from view to view. The example view above is the main view of the control panel which is called the Home view.
7	Softkey selections	Displays the functions of the softkeys (  and  ) in a given context.
8	Clock	Displays the current time. The time can be changed through the  <a href="#">Primary settings (page 49)</a> or  <a href="#">Settings (page 48)</a> menu.

You can adjust the display contrast and backlight functionality in the  [Primary settings \(page 49\)](#) or  [Settings \(page 48\)](#) menu.


---


## ■ Keys

The keys of the control panel are described below.




### Left softkey



The left softkey () is usually used for exiting and canceling. Its function in a given situation is shown by the softkey selection in the bottom left corner of the display.

 



 
 
Holding  down exits each view in turn until you are back in the Home view. This function does not work in special screens.

### Right softkey


The right softkey () is usually used for selecting, accepting and confirming. The function of the right softkey in a given situation is shown by the softkey selection in the bottom right corner of the display.

### Arrow keys

The up and down arrow keys ( and ) are used to highlight selections in menus and selection lists, to scroll up and down on text pages, and to adjust values when, for example, setting the time, entering a passcode or changing a parameter value.

The left and right arrow keys ( and ) are used to move the cursor left and right in parameter editing and to move forward and backward in assistants. In menus,  and  function the same way as  and , respectively.

### Help

The help key () opens a help page. The help page is context-sensitive, in other words, the content of the page is relevant to the menu or view in question. See [Help \(page 29\)](#) for more information on the help page.


### Start and Stop

In local control, the start key () and the stop key () start and stop the drive, respectively.

 
### Off

In Hand and Auto control, the Off key () is used to stop the drive.


### Hand

The Hand key () is used to start the drive in local mode. When the drive is running, if you switch to Auto mode, the drive changes the control location to Remote mode and the drive may stop.

## Auto


 

 





 







 
The Auto key () is used to run the drive automatically. The control is selected from primary or secondary or any DI. You can give the reference inputs in **Menu** → **Primary settings** → **Drive** or by setting the values in parameter groups 19 and 20.

## Loc/Rem

The location key () is used to switch the control between the control panel (Local) and remote connections (Remote). When switching from Remote to Local while the drive is running, the drive keeps running at the same speed. When switching from Local to Remote, the status of the remote location is adopted. See the drive-specific firmware manual for more details.

## Key shortcuts

The table below lists key shortcuts and combinations. Simultaneous key presses are indicated by the plus sign (+).

Shortcut	Available in...	Effect
 +  + 	any view	Save a screenshot. Up to fifteen images can be stored in the control panel memory. For instructions on how to transfer the images into a PC, see section <a href="#">Transferring files between the control panel and a PC (page 73)</a> .
 +   + 	any view	Adjust backlight brightness.
 +   + 	any view	Adjust display contrast.
 or 	Home view	Adjust reference.
 + 	parameter edit views	Revert an editable parameter to its default value.
 + 	any view	Show/hide parameter index and parameter group numbers.
 (keep down)	any view	Return to Home view by pressing down the key until Home view is shown.

## ■ Control panel and panel platform/holder LEDs

The ACS-AP-... control panel has a status LED. The control panel mounting platform or holder has two status LEDs. For their indications, see the following table.

Location	LED	Indication
Control panel	Continuous green	The unit is functioning normally.
	Flickering green	Data is transferred between the PC and the unit through the USB connection of the control panel.
	Blinking green	There is an active warning in the unit.
	Continuous red	There is an active fault in the unit.
	Blinking red	There is a fault that requires the stopping and restarting of the drive/converter/inverter.
	Blinking blue (ACS-AP-W only)	The Bluetooth interface is enabled, in discoverable mode, and ready for pairing.
	Flickering blue (ACS-AP-W only)	Data is being transferred through the Bluetooth interface of the control panel.
Control panel mounting platform or holder (with the control panel removed)	Red	There is an active fault in the unit.
	Green	Power supply for the control unit is OK.

## ■ USB connector

The USB connector is used for connecting the control panel to a PC. When connected, the control panel acts as an USB adapter for data transfer between the PC tool and the drive. It is also possible to transfer data between the PC and the control panel through the USB connection.

See chapter [Panel-to-PC USB connection \(page 71\)](#).

■ **RJ-45 connector**

The RJ-45 connector is used to electrically connect the control panel to the drive. Mechanical connection is achieved with the clip on the top.

■ **Type code label on the panel**

The type code label on the panel contains revision information. See an example label below.

The diagram shows a rectangular label with the following text and markings:

- 1: **ABB Oy**, Hiomotie 13, 00380 Helsinki, Finland
- 2: M/N: ACS-AP-W CODE: 3AXD50000025964 S/N: B1250121LL
- 3: MRP code (3AXD50000025964)
- 4: Serial number (B1250121LL)
- 7: Bar code
- 8: 3AXD50000025964B1250121LL Made in Country
- 5: CE marking
- 6: SW: v5.95
- 9: FCC ID: 2AFNGAPWSERIES
- 10: IC: 20555-APWSERIES
- 11: Manufactured in country



1	ABB Oy
2	Type code
3	MRP code
4	Serial number
5	CE marking
6	SW version
7	Bar code
8	Bar code in readable text
9	FCC ID number
10	IC CANADA number
11	Manufactured in country

**Note:** FCC ID and IC CANADA numbers are applicable only for ACS-AP-W and ACH-AP-W wireless control panels.

■ **Type code label on the panel package**

The type code label on the panel package contains revision information. See an example below.



1	ACS-AP-W	ABB Oy	2
3	Made in Country	CE	4
5			
6	3AXD50000025965A0210001LL		
	EAN code		
7			
8	6438177379744	SW:v5.95	9
1	Type code		
2	ABB Oy		
3	Manufactured in country		
4	CE marking		
5	Bar code		
6	Bar code in readable text		
7	EAN bar code		
8	EAN number code		
9	SW version		

### ■ Battery cover

Underneath the battery cover there is a compartment for the battery that powers the real-time clock of the control panel.

### ■ Wireless interface

The ACS-AP-W and ACH-AP-W Assistant control panels with Bluetooth interface enable wireless interface for ABB drives. The wireless panels are also embedded with powerful processor and memory that enables faster communication.

The functions of

- ACS-AP-W panel are same with ACS-AP-I and ACS-AP-S panels, and
- ACH-AP-W panel are same with ACH-AP-H panel.



**NO WARNING!** This device is not allowed to be used within a 20 km radius of the centre of Ny-Ålesund at Svalbard, Norway.





## Basic operation

---

### What this chapter contains

This chapter describes the basic operations and components of the user interface. It also lists the common user tasks and provides instructions to complete the task.

### User interface overview


The user interface has the following main components:

Component	Description
Home view	Used to monitor signals. See <a href="#">Home view (page 29)</a> .
Menu	Access to most functions of the control panel. See the detailed description in chapter <a href="#">Functions in the main Menu (page 33)</a> .
Options	Used to set a reference, change the motor direction, select the drive, edit Home view pages, and see the fault and warning status. See the detailed description in chapter <a href="#">Functions in the Options menu (page 53)</a> .
Help	Provides information on the current view or menu or on possible problems associated with it. See <a href="#">Help (page 29)</a> .
Faults and warnings	View faults and warnings when the drive or control panel experiences an error. See <a href="#">Fault tracing (page 63)</a> .

---



## Control panel navigation

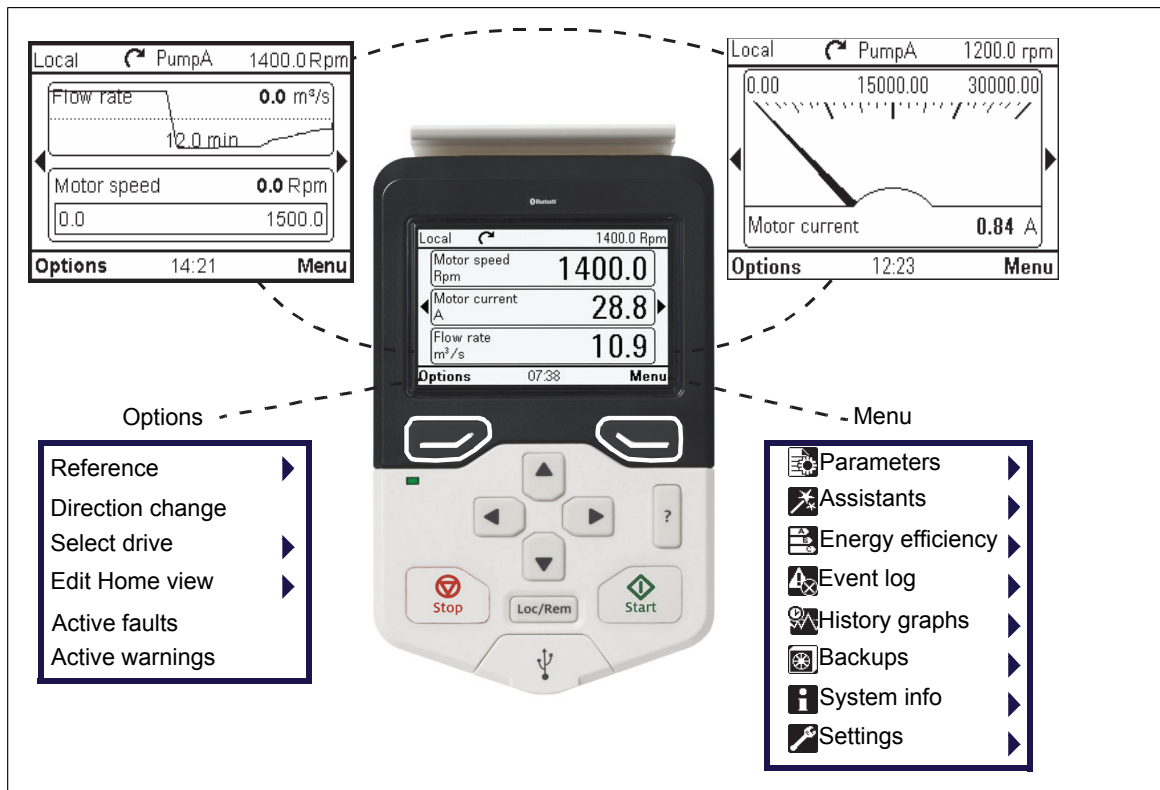



Use the arrow keys and softkeys for navigation. Follow the choices on the screen.



**Note:** The menu shown is an example only. The Menu varies based on the drive/device to which the panel is connected.

### ■ Navigation memory


The Assistant control panel has a navigation memory that allows you to backtrack your steps through the user interface with the arrow keys  and . The path you have last accessed remains in the memory for 10 minutes.

- The left arrow key () moves you backwards in the menu structure. If you press  repeatedly, you return back to the Home view.
- The right arrow key () moves you forward in the menu structure. If you press  repeatedly, you move forward along the path in the menu structure you had previously accessed.

## Home view

The main view of the control panel is called **Home view**. In the **Home view**, you can monitor the status of the drive, such as its speed, torque or power. The **Home view** has one or more pages, each of which can display up to three signals.

The number of pages and the signals shown on each page are customizable, and the Home view configuration is saved to the drive whenever you change it. The maximum total number of signals displayed varies from 9 to 21, depending on the drive. In the example below, three Home view pages are used, showing different display formats.

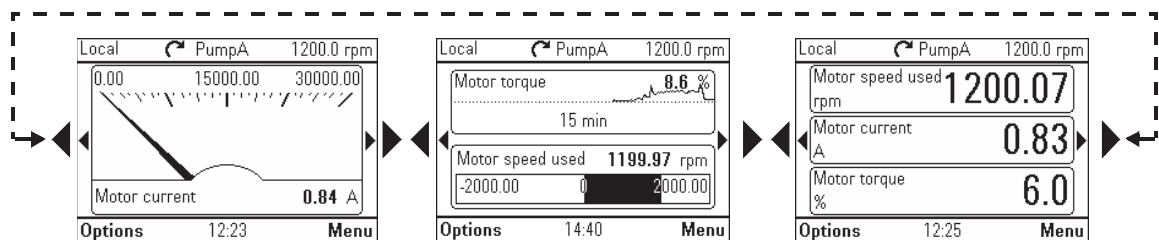

Each application macro and user set has a default Home view configuration. When you select an application macro or restore a user set, the Home view configuration changes accordingly. There is a default Home view configuration in each drive, which can be restored in the [Primary settings \(page 49\)](#) or [Settings \(page 48\)](#) menu.

**Note:** The Menu varies based on the drive/device to which the panel is connected.

The **Home view** opens automatically when you power up the drive. The **Home view** is also displayed from the **Options** menu or the main **Menu**, if no key is pressed for 10 minutes.

**Tip:** You can return to the Home view from any view except special screens by holding down the left softkey .

### ■ Navigating in the Home view

- Use and to move between the different pages of the Home view. The page numbers are shown while you scroll between pages.
- Use or to adjust the reference (visible in the top right corner). See also [Setting the reference \(page 54\)](#).
- Press (**Menu**) to open the main **Menu** (see [Functions in the main Menu \(page 33\)](#)).
- Press (**Options**) to open the **Options** menu (see [Functions in the Options menu \(page 53\)](#)).

## Help

You can open a context-sensitive help page in all menus and views by pressing button. The help page provides information on the use of the current view or menu, or on possible problems associated with it.

On the help page, you can press button again or press (**Exit**) to exit.





Using button, you can also view details of control panel type and version in the panel itself. See instructions in section [Applicability \(page 10\)](#).

## Common user tasks




 

The following tables list common user tasks and describes how to complete the task. See chapters *Functions in the main Menu (page 33)* and *Functions in the Options menu (page 53)* for detailed descriptions of functions in the menus.

**Note:** The Menu options varies based on the drive/device to which the control panel is connected.


### ■ Basic operation of the drive

Task	Actions
Start and stop the drive.	In local control, press  to start the drive and  stop key to stop the drive.
Set the reference (for example, speed) in the Home view.	In local control, go to <b>Options &gt; Reference</b> . Set the reference with the arrow keys. For detailed instructions, see <i>Setting the reference (page 54)</i> .
Switch between local and remote control.	Press  .
Change the direction of motor rotation.	In local control, go to <b>Home</b> view, press  ( <b>Options</b> ) to open the <b>Options</b> menu and select <b>Direction change</b> .

### ■ Parameters







Task	Actions
Choose parameters displayed on the Favorites list.	Go to <b>Menu</b> → <b>Parameters</b> → <b>Favorites</b> → <b>Edit</b> . See also <i>Favorites (page 35)</i> .
View/edit parameters.	Go to <b>Menu</b> → <b>Parameters</b> → <b>Complete list</b> to view parameters. See <i>Editing parameters (page 37)</i> for instructions on editing parameters
Add parameters to the Home view.	See <i>Editing the contents of the Home view (page 54)</i> .
Show/hide parameter index and group numbers.	Press  +  .
Restore parameter default value.	In the editing mode, press  +  . To save the default value, press  (Save).
View parameters that differ from Application Macro defaults.	Go to <b>Menu</b> → <b>Parameters</b> → <b>Modified</b> .

### ■ System information and help







Task	Actions
How to get help.	Press  button to open the context-sensitive help.
To view drive information.	Go to <b>Menu</b> → <b>System info</b> → <b>Drive</b> .
To view control panel version.	Go to <b>Menu</b> → <b>System info</b> → <b>Control panel</b> .
To view application program license.	Go to <b>Menu</b> → <b>System info</b> → <b>Licenses</b> .
To view Product application information.	Go to <b>Menu</b> → <b>System info</b> → <b>Product application</b> .

### ■ Faults and warnings



See *Fault tracing (page 63)* for detailed information on faults and warnings.

<b>Task</b>	<b>Actions</b>
Hide/view an active fault.	Faults are automatically displayed. If you hide a fault by pressing  ( <b>Hide</b> ), it automatically reappears after 60 seconds of no key presses. You can also view the fault through <b>Options &gt; Active faults</b> .
Open help page on a fault.	Press  button to view the help page.
Reset an active fault.	Press  ( <b>Reset</b> ) to reset an active fault.
View tripping faults.	Go to <b>Menu</b> → <b>Event log</b> → <b>Faults</b> .
Hide/view an active warning.	Warnings are automatically displayed. If you hide a warning by pressing  ( <b>Hide</b> ), it automatically reappears if the warning is still active after 60 seconds of no key presses.
Open help page on a warning.	Press  ( <b>How to fix</b> ) or  button to view the help page.
Reset an active warning.	Warnings disappear automatically once the condition that has triggered it goes away.
View past warnings and faults.	Go to <b>Menu</b> → <b>Event log</b> → <b>Other events</b> .

## ■ Basic settings and assistants

<b>Task</b>	<b>Actions</b>
Adjust backlight brightness.	Press and hold  , and press  or  .
Adjust display contrast.	Press and hold  , and press  or  .
Change language.	Go to <b>Menu</b> → <b>Settings</b> → <b>Language</b> .
Change time and date, and related settings.	Go to <b>Menu</b> → <b>Settings</b> → <b>Date &amp; time</b> .
Launch an assistant.	Go to <b>Menu</b> → <b>Assistants</b> and select an assistant to launch.

## ■ Backups

<b>Task</b>	<b>Actions</b>
Create a backup.	See  <a href="#">Backups (page 44)</a> .
Restore a backup.	Restore a backup. See  <a href="#">Backups (page 44)</a> .







# 5

## Functions in the main Menu

---


### What this chapter contains

This chapter describes the functions in the main **Menu**.







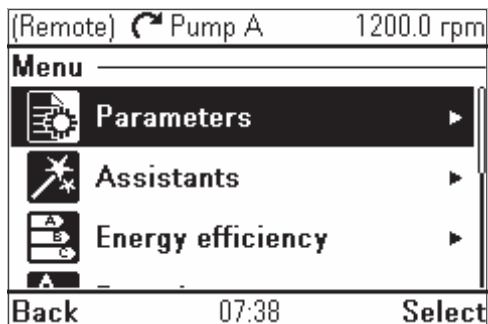




---

## Menu







All functions of the control panel are accessed through the Menu which is the main menu of the user interface. The sub-menus of the Menu are listed below and they are described in more detail in the subsequent sections. The submenus depend on the product that is controlled with the control panel.



The following sub-menus varies based on the drive/device to which the panel is connected:

 

Sub-menu	Function	See page...
 <i>Parameters</i>	View and edit parameters.	<a href="#">35</a>
 <i>Assistants</i>	Launch an assistant.	<a href="#">41</a>
 <i>Energy efficiency</i>	Use energy-saving features.	<a href="#">42</a>
 <i>Event log</i>	View information on faults and warnings.	<a href="#">43</a>
 <i>History graphs</i>	View the load profile.	<a href="#">43</a>
 <i>Backups</i>	Save settings in the control panel memory and restore them to the drive.	<a href="#">44</a>
 <i>System info</i>	View information on the drive and options.	<a href="#">46</a>
 <i>Settings</i>	View and change time and date settings, language, display and other settings, and edit texts.	<a href="#">48</a>
 <i>Primary settings</i>	View and change settings related to motor, PID, fieldbus, advanced functions, clock, region, and display.	<a href="#">49</a>
 <i>I/O</i>	Provides terminal name, number, electrical status and logical meaning of the drive.	<a href="#">50</a>
 <i>Diagnostics</i>	Provides faults and warnings information and helps to resolve potential problems.	<a href="#">50</a>


### ■ Navigating in the Menu

- Use  and  to select a menu item.
- Use  or  (**Exit**) to go back to the **Home** view.
- Use  or  (**Select**) to enter the selected sub-menu.

## Parameters

In the **Parameters** menu, you can view and edit parameters. There are four sub-menus through which you can access the parameters. In each sub-menu, the grouping principle of the parameters is different.


In each sub-menu, you can edit a parameter by highlighting it and pressing  (**Edit**). Counter parameters and certain number, text and bit field parameters are read-only and can be viewed by pressing  (**View**).

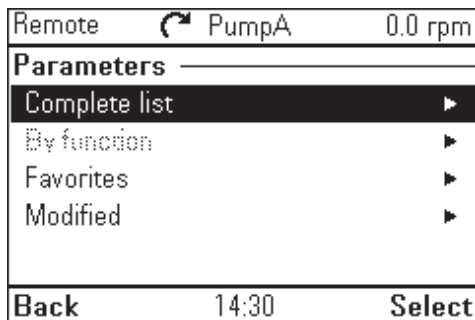

### ■ Complete list

In the **Complete list** sub-menu, all parameter groups are listed in numerical order. If you select a parameter group, all parameters in that group are listed and you can view and edit the parameters.

Parameter numbers are always displayed in this sub-menu.

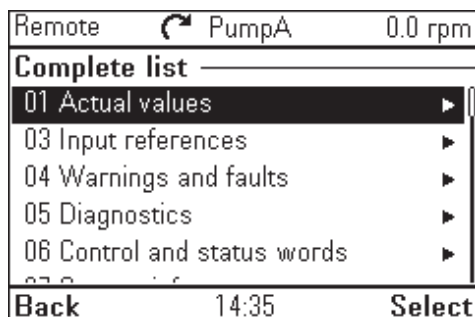

### ■ By function


This functionality is available in a future release.


### ■ Favorites


In the **Favorites** sub-menu, only user-selected parameters are listed. The order is determined by the parameter number.


### Editing the list of favorites

1. Select **Edit**.

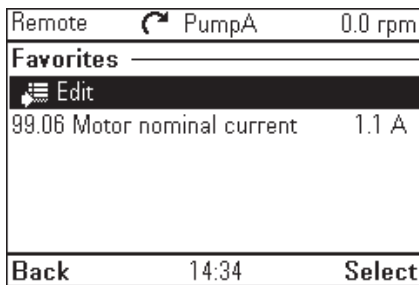


2. Check parameters you want to show on the list by pressing  (**Select**).

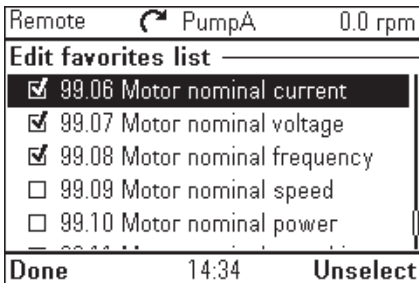

3. Press  (**Done**) to exit and save changes.


#### ■ Modified


In the **Modified** sub-menu, only the parameters whose values differ from the Application Macro defaults are listed. The order is determined by the parameter number.

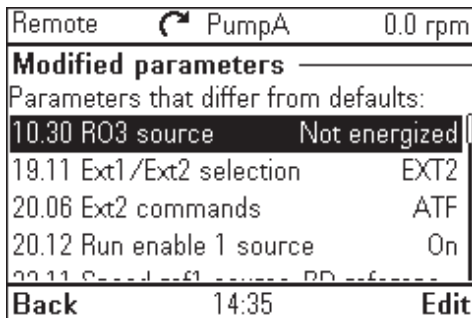


#### ■ Adding parameters to the Home view

 When you view a read-only parameter in the **Parameters** menu, you can add the parameter to the **Home** view.

- Press  (**Add to view**) to open the Home view in the editing mode then you can add the parameter to an empty display slot or replace an existing parameter with it.

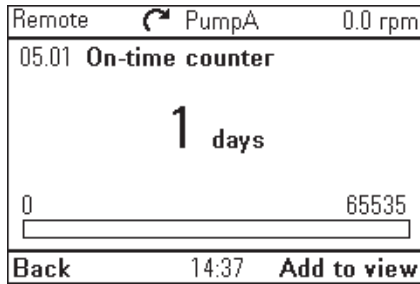









- Press  (**Back**) to go back to the parameter view.

Editing the **Home** view functions are described in more detail in [Editing the contents of the Home view \(page 54\)](#).

### ■ Editing parameters







You can edit parameter values with the arrow keys.




1. Press  (**Select**) to select the desired parameter from the list.
2. Press  (**Edit**).
3. Use  and  to change the value.
4. Press  (**Save**) to save the value, or press  (**Cancel**) to exit the parameter view and discard any changes.
5. Press  +  to restore the default value of the parameter (this does not save it).

See the sections below for more information on editing specific parameter types.

### ■ Editing numeric parameters

Numeric parameters include parameters with linear numeric values, passcodes, time and date parameters, durations and exception dates. For numeric parameters with linear values, the minimum and maximum values are displayed in the bottom left and right corners of the content area, respectively.

- Use  and  to highlight digits
- Use  and  to change the value.
- Press  (**Save**) to save the value and exit the view.
- To cancel and exit, press  (**Cancel**).

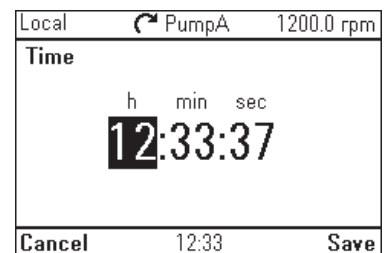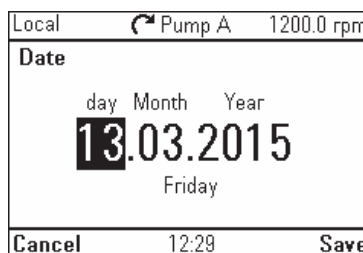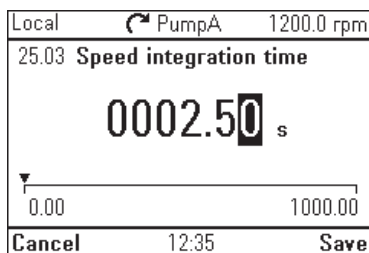


### ■ Editing selection list parameters

A selection list consists of mutually exclusive options, such as the language selection list.

### 38 Functions in the main Menu


- Use **▲** and **▼** to move the cursor.
- Press **☞** (**Save**) to select and save the highlighted option.
- To cancel and exit, press **☞** (**Cancel**).

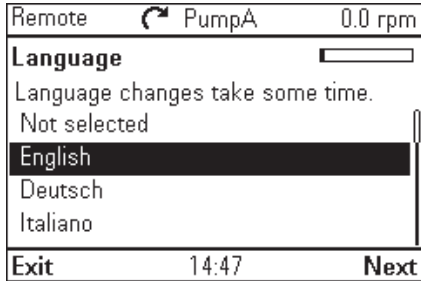


Some selection list parameters allow you to choose another parameter as its value. In addition to a preset list of options, you can select a parameter freely, represented by the selection **Other** in the list.

To select a parameter, follow the instructions:

1. Select **Other** to move to a list of parameter groups.

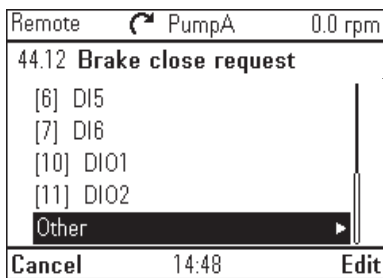


2. Select a parameter group to move to a list of parameters.

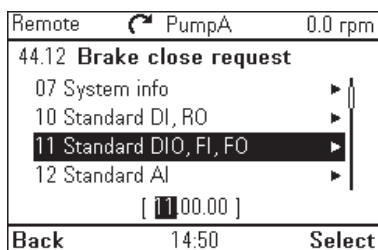


3. Depending on the parameter you are editing, you must select a parameter or an individual bit, or you may choose either of the two.
    - If the right softkey label is **Select**, you must select an individual bit as the value of the parameter you are editing. Press **☞** (**Select**) to move to a bit selection list.
    - If the right softkey label is **Save**, you can select that parameter as the value of the parameter you are editing. Press **☞** (**Save**) to save the selection.
    - If the right softkey label is **Save** and there is also an arrow on the right hand side of the selection, you can choose an individual bit or all the bits in that parameter.
-

Press **▶** to move to a bit selection list. If you want to select all the bits in the parameter, press **☰** (**Save**) instead.

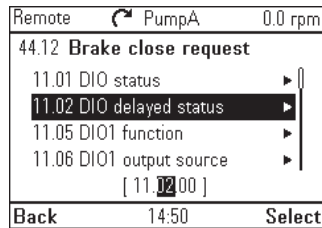


4. Select a bit if applicable (see the previous step).

Press **▶** to invert the selected bit and press **☰** (**Save**) to save the selection.

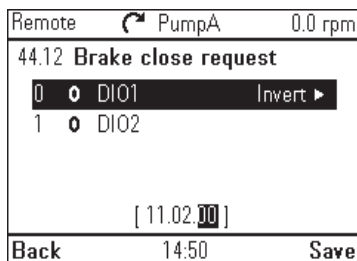


The parameter or bit is now selected as the parameter value.

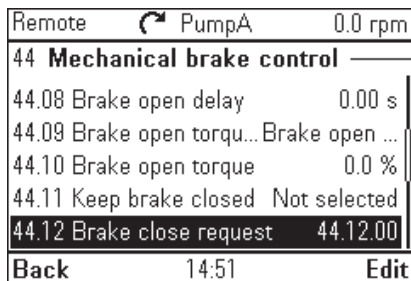

### ■ Editing bit-field parameters




 
A bit-field parameter is a bit word whose individual bits can be edited. The labels describe the function of each bit, and the current state of the bit is shown as 1 or 0.

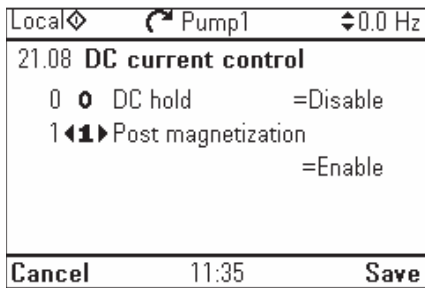
- Use **▲** and **▼** to select a bit.
- To change a bit value, press **◀** or **▶**.
- To save the bit values and exit, press **☰** (**Save**).
- To cancel and exit, press **☱** (**Cancel**).




### ■ Editing texts




Texts that you can edit with the control panel include parameter display names in the Home view and their units, drive names, fault and warning names, and other customizable notes or names.

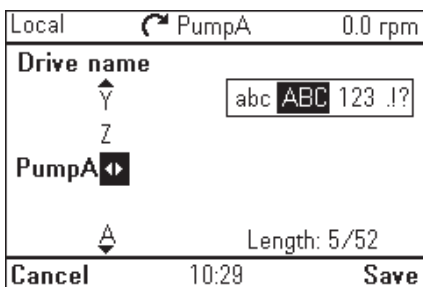- To select the character mode ((lower case / upper case / numbers / special characters), press , unit symbol  is highlighted and then select the mode with  or .
- Now you can start adding characters. The mode remains selected until you select another one.

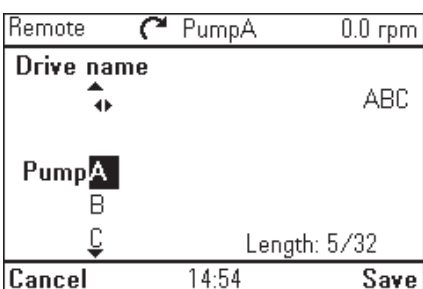

- To add a character, highlight it with   and then press .




- To remove a letter, press .
- Press  (**Save**) to accept the new setting, or press  (**Cancel**) to go back to the previous view without making changes.

**Note:** The current software version supports only the English character set (a...z).

### ■ Resetting counters

 Counters are parameters that measure incremental quantities associated with the use of the drive such as runtime or energy consumption. Counters are updated automatically and






cannot be edited, but it is possible to reset a counter to zero by pressing down  (**Reset**) for three seconds.


**Note:** If a trigger value is defined for the counter, the counter's progress from zero to the trigger value is shown as a bar graph.







## Assistants

 In the Assistants menu, you can launch an assistant, which is a sequence of steps that help you to complete a task, such as setting up the control panel to use with the drive and the motor, or fixing a fault. You can also generate a QR code, which is an optical code containing information of the drive. The code can be read with ABB application and mobile device.
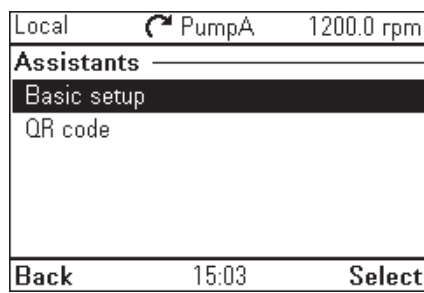
### ■ Launching an assistant

  1. Use  and  to highlight the desired assistant.
2. Press  (**Select**).






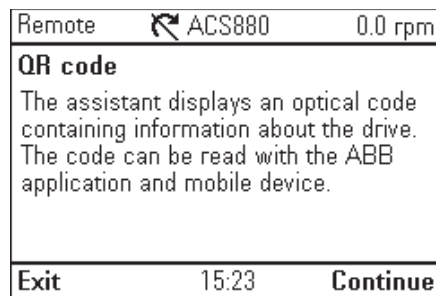
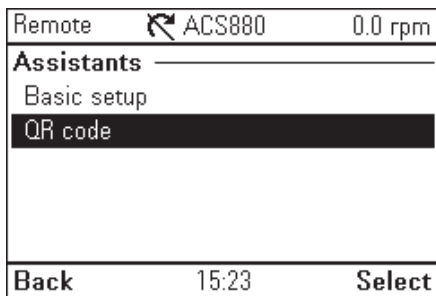
3. Follow the instructions on the screen to complete the task defined by the assistant:
  - Use  and  to select settings.
  - To edit a setting, press  (**Edit** or **Select**).
  - Use  or  to move between the pages of the assistant. The progress bar on the upper right corner of the screen indicates the progress.
  - To exit the assistant, press  (**Exit**).


Most settings accessed in assistant steps can also be accessed through the main Menu or the Parameters menu, but the steps the assistants are more user-friendly.



**Note:** If you used the Assistants menu, complete all steps to save the changes, otherwise the changes are canceled.

## ■ Generating a QR code


1. In the Assistants menu, select QR code using  and  and press  (**Select**).



2. Press  (**Continue**).  
The control panel collects data and generates the code.

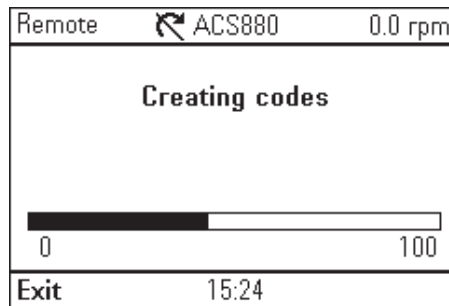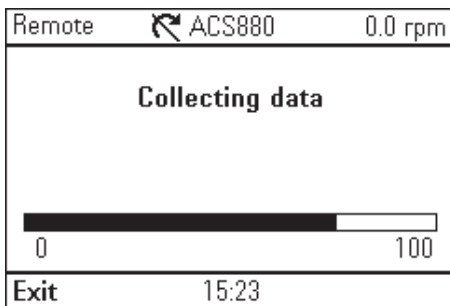

Press << or >> to navigate to the next screen.

You can also generate QR code from **Menu** → **System info** → **QR code**. See  [System info \(page 46\)](#).

## Energy efficiency

In the Energy efficiency menu, you can view and configure parameters related to energy savings, such as kWh counters.

Local	↻ PumpA	0.0 rpm
<b>Energy efficiency</b>		
45.01	Saved GW hours	0 GWh
45.02	Saved MW hours	0 MWh
45.03	Saved kW hours	0.0 kWh
45.05	Saved money x1000	0 EUR
45.06	Saved money	0.00 EUR
<b>Back</b>	13:38	<b>View</b>

## 4x Event log

In the **Event log** menu, you can view information collected on faults and warnings. Events are automatically logged. See [Fault tracing \(page 63\)](#) for more information on faults and warnings.

- **Faults** sub-menu displays the faults that are tripped the drive.
- **Other events** sub-menu displays all other faults, and warnings and their details.
- **Active faults** and **Active warnings** sub-menu displays the faults and warnings which are active.

Remote	↻ PumpA	0.0 rpm
<b>Event log</b>		
	Faults	▶
	Other events	▶
	Active faults	▶
	Active warnings	▶
<b>Back</b>	14:59	<b>Select</b>

## 9x History graphs

The History graphs menu contains Trends and Load profile sub-menu.


Remote	↻ PumpA	0.0 rpm
<b>History graphs</b>		
	Trends	▶
	<b>Load profile</b>	▶
<b>Back</b>	15:00	<b>Select</b>

### ■ Trends

This functionality is available in a future release.


■ **Load profile**

In the **Load profile** submenu, you can view and configure load profiles.

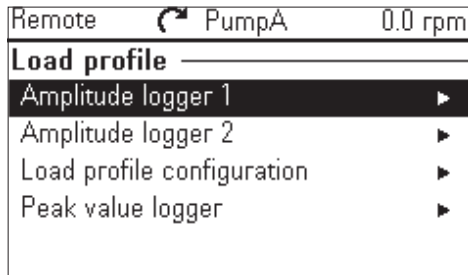

The menu contains the following sub-menus:


- **Amplitude logger 1:** Opens a Histogram view, which displays the motor current as a distribution histogram. This logger cannot be reset.
- **Amplitude logger 2:** Opens a Histogram view, which displays the contents of an amplitude logger as a distribution histogram. You can select the signal to be monitored.
- **Load profile configuration:** Select the signal to be monitored in Amplitude logger 2.
- **Peak value logger:** Select a signal to be monitored by a peak value logger.

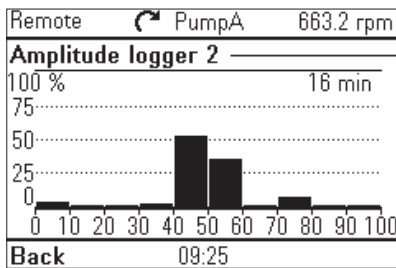

For more information on load profiles, see the appropriate firmware manual.

 **Backups**

In the **Backups** menu, you can save parameter settings in the control panel memory and restore parameter settings from a backup to the drive. You can store up to two backup files on the control panel.

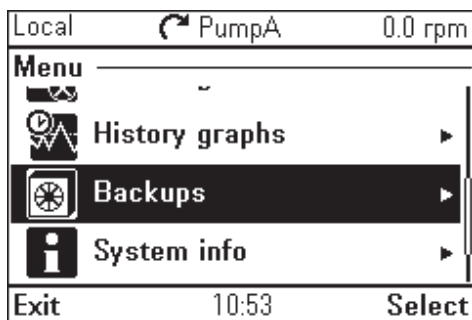

The assistant panel has a dedicated space for one automatic backup. An automatic backup is created two hours after the last parameter change. After completing the backup, the panel

waits for 24 hours before checking if there are additional parameter changes. If there are, it creates a new backup overwriting the previous one.


You can copy backup files to and from a PC with any file manager application (example, Windows Explorer).

Some of the Backup icons are listed below:

Backup	Icon
Automatic backup	
Compatible backup	
Incompatible backup	
Partly compatible	


### ■ Creating a parameter backup

1. In the **Backups** menu, select **Create backup**.

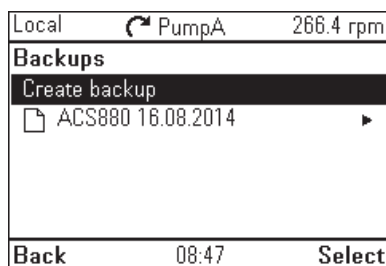

If there is a free backup slot in the control panel, the following step is skipped.

2. Use and to select one of the existing backup files, and press **Replace**.
3. Wait until the backup is completed. An animation is shown on the control panel during the backup process. The control panel automatically returns to the **Backups** menu.

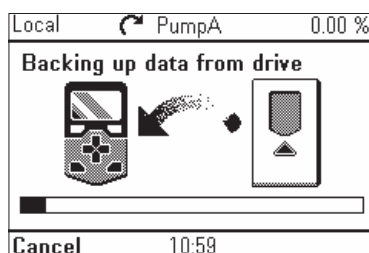

**Note:** If the backup process is canceled or interrupted, the previously saved backup file is not deleted or damaged. Thus, if you accidentally start a backup process, you can safely cancel it before its completion.


### ■ Restoring a parameter backup

1. In the **Backups** menu, select the backup file you want to restore.
2. Select **View backup contents** and check that it is the correct backup file and that it is suitable for restoring.

**Note:** This functionality is available in a future release.


3. Select one of the restore options:

- To restore all settings, select **Restore all parameters**.

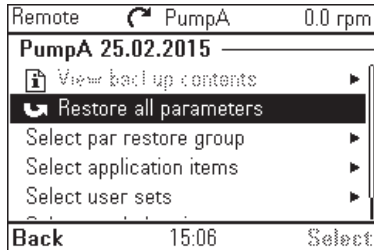


- To restore a set of parameters, select **Select par restore group** and select the desired parameters from the list, and then select **Restore**.
- To select application parameters, select **Select application items** and select the desired parameters from the list and then select **Restore**.
- To select user parameters sets, select **Select user sets** and select the desired user set from the list and then select **Restore**.
- To select production data items, select **Select prod. data items** and select the desired production data and then select **Restore**.

4. Wait until the restore is completed. An animation is shown on the control panel during the restoring process. The control panel automatically returns to the **Backups** menu.



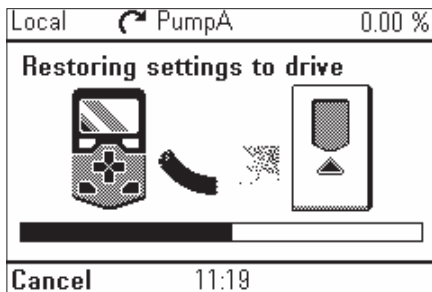



## **i** System info

In the **System info** menu, you can view information about the drive, control panel, fieldbus and any installed option modules. You can also generate a QR code that contains the drive information.

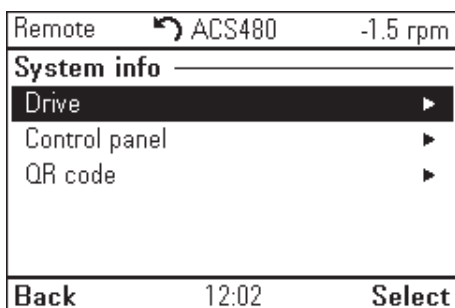


Sub-menu	Function																											
Drive	<p>Shows information on the selected component, such as firmware version, serial number, type code, device ID number or date of manufacture.</p> <table border="1" data-bbox="536 349 962 633"> <tr> <td>Remote</td> <td>↶ ACS480</td> <td>-1.5 rpm</td> </tr> <tr> <td colspan="3"><b>Drive</b></td> </tr> <tr> <td>Panel bus id:</td> <td></td> <td>1</td> </tr> <tr> <td>Product name:</td> <td></td> <td>ACS480</td> </tr> <tr> <td>Product type:</td> <td></td> <td>ACS480</td> </tr> <tr> <td>FW version:</td> <td></td> <td>ASDKA v2.05.0.0</td> </tr> <tr> <td>LP version:</td> <td></td> <td>ASDDA v2.05.0.0</td> </tr> <tr> <td>Backup version:</td> <td></td> <td>00.01.00.00</td> </tr> <tr> <td><b>Back</b></td> <td></td> <td>12:01</td> </tr> </table> <p><b>Note:</b> The content of the view varies between different drive types.</p>	Remote	↶ ACS480	-1.5 rpm	<b>Drive</b>			Panel bus id:		1	Product name:		ACS480	Product type:		ACS480	FW version:		ASDKA v2.05.0.0	LP version:		ASDDA v2.05.0.0	Backup version:		00.01.00.00	<b>Back</b>		12:01
Remote	↶ ACS480	-1.5 rpm																										
<b>Drive</b>																												
Panel bus id:		1																										
Product name:		ACS480																										
Product type:		ACS480																										
FW version:		ASDKA v2.05.0.0																										
LP version:		ASDDA v2.05.0.0																										
Backup version:		00.01.00.00																										
<b>Back</b>		12:01																										
Control panel	<p>Shows information on the hardware and software version of the control panel.</p> <table border="1" data-bbox="536 741 991 1043"> <tr> <td>Remote</td> <td>↶ ACS480</td> <td>-1.5 rpm</td> </tr> <tr> <td colspan="3"><b>Control panel</b></td> </tr> <tr> <td>Product type:</td> <td></td> <td>ACS-AP-S</td> </tr> <tr> <td>HW version:</td> <td></td> <td>H</td> </tr> <tr> <td></td> <td></td> <td>Flash AT32/E</td> </tr> <tr> <td>FW version:</td> <td></td> <td>GPAPS v5.20</td> </tr> <tr> <td>Serial number:</td> <td></td> <td>H6341498WU</td> </tr> <tr> <td>Manufacturing date:</td> <td></td> <td>19.08.2016</td> </tr> <tr> <td><b>Back</b></td> <td></td> <td>12:02</td> </tr> </table>	Remote	↶ ACS480	-1.5 rpm	<b>Control panel</b>			Product type:		ACS-AP-S	HW version:		H			Flash AT32/E	FW version:		GPAPS v5.20	Serial number:		H6341498WU	Manufacturing date:		19.08.2016	<b>Back</b>		12:02
Remote	↶ ACS480	-1.5 rpm																										
<b>Control panel</b>																												
Product type:		ACS-AP-S																										
HW version:		H																										
		Flash AT32/E																										
FW version:		GPAPS v5.20																										
Serial number:		H6341498WU																										
Manufacturing date:		19.08.2016																										
<b>Back</b>		12:02																										

 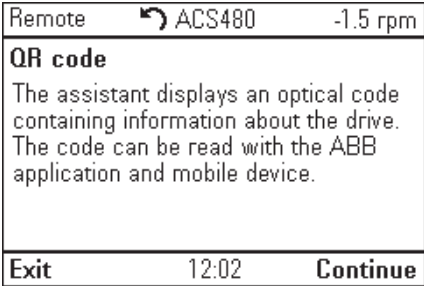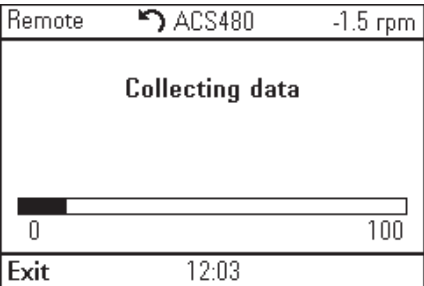Sub-menu	Function
QR code	<p>Shows an optical code containing information of the drive. The code can be read with ABB application and mobile device.</p>  <p>To generate the QR code, press  (<b>Continue</b>).</p>  <p>The control panel collects data and creates the code.</p> 


## Settings

The Settings menu has the following sub-menus:

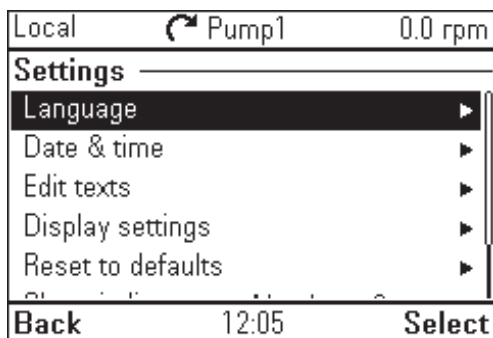

Sub-menu	Function
Language	Select different language in the control panel.

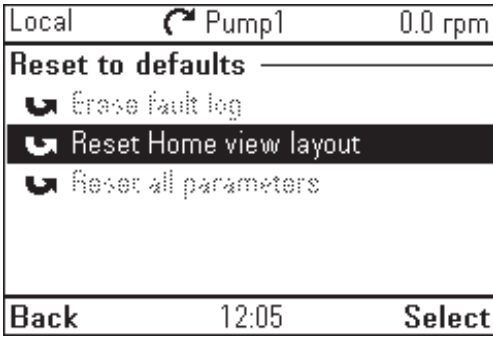


Sub-menu	Function
Date & time	Set date and time, and select their display settings and whether the control panel automatically adjusts the time for daylight savings changes. The time and date display setting determines how time stamps are formatted.
Edit texts	Customize editable user interface texts, such as the drive name.
Display settings	Set backlight power save on/off and adjust display contrast and brightness.
Reset to defaults	<p>Reset settings to their default values.</p> <p><b>Erase fault log:</b> This functionality is available in a future release.</p> <p><b>Reset Home view layout:</b> Default Home view settings are restored.</p> <p><b>Reset all parameters:</b> This functionality is available in a future release.</p> 
Show in lists	Show or hide the numeric IDs of: <ul style="list-style-type: none"> <li>parameters and groups</li> <li>option list items</li> <li>bits</li> <li>devices in <b>Options</b> → <b>Select drive</b>.</li> </ul>
Pass code	Enter pass codes into this parameter to activate further access levels (for example additional parameters).

## ⚙ Primary settings

The **Primary settings** menu has the following sub-menus.

**Note:** The contents displayed may vary based on the drive/device to which the panel is connected. The menu shown is only an example.

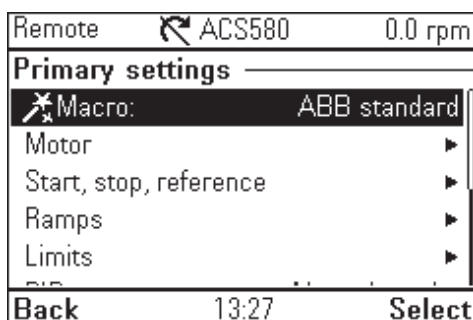


Sub-menu	Function
Macro	Set up drive control and reference source by selecting from a set of predefined wiring configurations.
Drive	Adjust drive related settings, such as control location, run permissions, ramps, limits, constants speeds, flying starts references.

Sub-menu	Function
Motor	Adjust motor-related settings, such as control mode, nominal values, ID run or thermal protection. Note that the settings that are visible depend on other selections, for example vector or scalar control mode, used motor type or selected start mode.
Loop controller	Set up loop controller settings and actual values. Loop controller is only used in remote control.
Pump and fan control	Controls one motor connected to the drive and up to 3 auxiliary motors.
Communication	Use the drive with a fieldbus.
Start, stop, reference	Set up start/stop commands, reference, and related features, such as constant speeds or run permissions.
Ramps	Set up acceleration and deceleration settings.
Limits	Set the allowed operating range. This function is intended to protect the motor, connected hardware and mechanics. The drive stays within these limits, no matter what reference value it gets.
PID	Set up the settings and actual values for the process PID controller. PID is only used in remote control.
Fieldbus	To make the protocol configurations easier.
Advanced options/functions	Contains settings for advanced functions, such as triggering or resetting faults through I/O, or switching between entire set of settings.
Clock, region, display	Contains settings for language, date and time, display (such as brightness) and settings for changing how information is displayed on screen.
Reset to defaults	Enables you to reset the Home view to its original factory state.

## I/O


In the **I/O** menu, each row provides terminal name, number, electrical status and logical meaning of the drive. Each row also provides a sub-menu that provides further information on the menu item and allow you to make changes to the I/O connections.

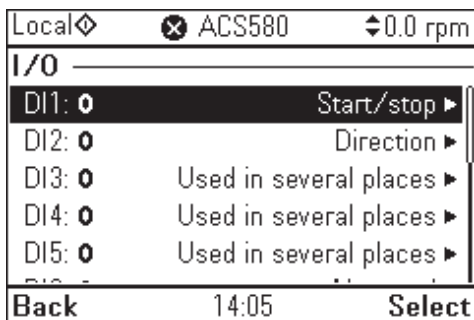


## Diagnostics

The **Diagnostics** menu provides diagnostic information, such as faults and warnings and helps you to resolve potential problems. Use the menu to make sure that the drive setup is functioning correctly.

**Note:** The contents displayed may vary based on the drive/device to which the panel is connected, and the menu shown is only an example.

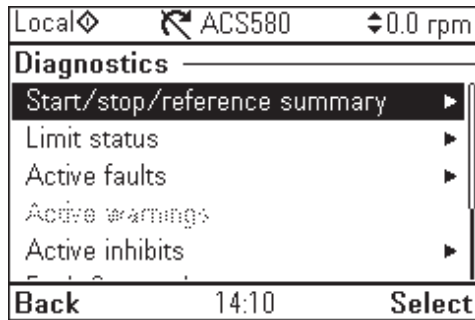

Sub-menu	Function
Start, stop, reference, summary	Shows where the drive is currently taking its start, stop commands and reference. The view is updated in real time. If the drive is not starting or stopping as expected, or runs at undesired speed, use this view to find out where the control comes from.
Limit status	Describes any limits currently affecting operation. If the drive is running at undesired speed, use this view to find out if any limitations are active.
Active faults	Shows the currently active faults and provides instructions on how to fix and reset.
Active warnings	Shows the currently active warnings and provides instructions on how to fix and reset.
Active inhibits	Shows the currently active inhibits. The drive cannot start. Drive is not parameterized correctly.
Fault & event log	Lists the faults, warnings and other events that have occurred in the drive.
Fieldbus	Provides status information and sent and received data from fieldbus for troubleshooting.
Load profile	Provides status information of load distribution (that is, drive running time spent on each load level) and peak load levels.

 

# 6

## Functions in the Options menu


---

### What this chapter contains

This chapter describes functions in the **Options** menu.

### Options menu

In the **Options** menu, you can control the settings related to the **Home** view.

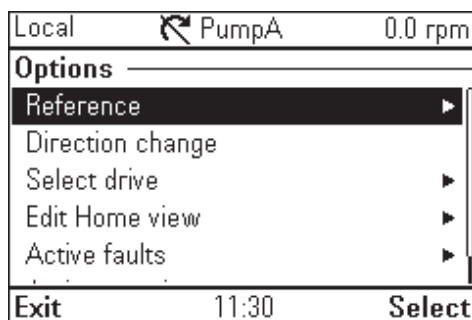

**Note:** The contents displayed may vary based on the drive/device to which the panel is connected.

The menu shown is only an example.

The **Options** menu has the following sub-menus:

Sub-menu	Function
Reference	Set the reference value by using  and . The changes take place when you save them with a key press . See <a href="#">Setting the reference (page 54)</a> .
Direction change	Change the direction of the motor rotation in local control mode.

---

Sub-menu	Function
Select drive	Enable or disable the panel bus. If enabled, view the status of drives in the panel bus and select which drive to control with the control panel. See chapter <a href="#">Control of multiple drives (page 59)</a> .
Edit Home view	Edit the contents of the <b>Home</b> view. See <a href="#">Editing the contents of the Home view (page 54)</a> ..
Active faults	View an active faults. See chapter <a href="#">Fault tracing (page 63)</a> .
Active warnings	View an active warnings. See chapter <a href="#">Fault tracing (page 63)</a> .

## Setting the reference

You can change the reference when the drive is in the local control mode. You can also change the reference in remote control mode if the drive configuration permits it. Changes take effect when saved with a key press.

1. Press **Loc/Rem** key to switch to the local control mode, if the text in the top left corner of the display reads **Remote**.
2. In the **Options** menu, select **Reference**.
3. Change the reference by using the following keys:
  - Use **◀** or **▶** to select a digit to edit.
  - Use **▲** and **▼** to change the value of the selected digit.
4. Press **☞** (**Save**) to save the reference value, or **☞** (**Cancel**) to discard the changes. The control panel returns to the **Home** view.


Tip: To adjust the reference from the **Home** view, press **▲** or **▼** and the reference changes immediately. The reference value is highlighted when you are changing it. If you hold down the arrow key, the rate at which the value changes accelerates.




## Editing the contents of the Home view

1. In the **Options** menu, select **Edit Home view**. The **Home** view opens in editing mode.
2. In the editing mode, you can add, edit and delete the displayed parameters.  
After editing the contents, press **☞** (**Done**) to confirm the changes and to exit the editing mode and return to the **Home** view.

Two-signal page in editing mode

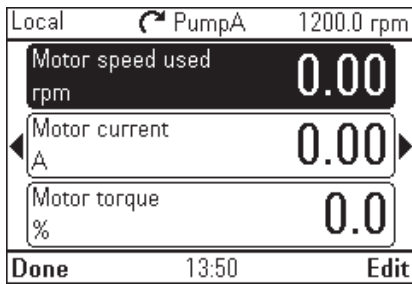


Empty page in editing mode

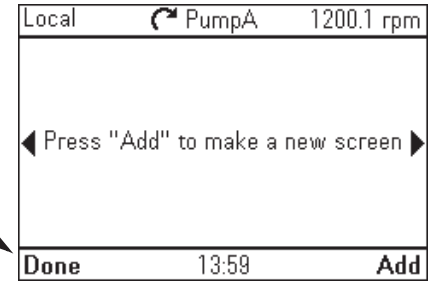


Softkey labels and a blinking cursor indicate that the control panel is

3. In the editing mode, use and to move between the different pages of the **Home** view.
  - To add a new page, navigate to the page that reads Press **Add** to make a new screen.
  - To edit, add or delete parameters on an existing page, navigate to that page.
4. Use and to move the cursor highlight.
  - To add a new parameter to an existing page, highlight an area above, between or below an existing parameter.
  - To edit or remove an existing parameter, highlight that parameter.

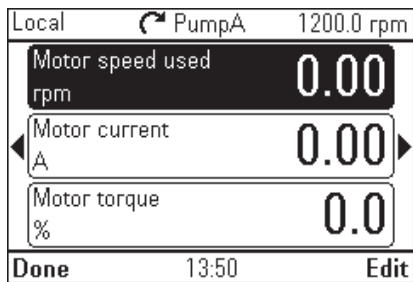

5. Press (**Edit**) to open the **Display Slot** menu.

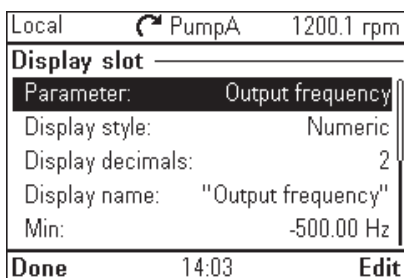

6. Choose a parameter, its display settings and scaling.
 


**Note:** Parameters whose values have textual representations (such as the names of bit states) or contain characters other than numbers (such as dates or durations) are automatically displayed as text. For these parameters, Display style and selections pertaining to numeric parameters are not available.

  - **Parameter:** Select the parameter to show in the selected slot. The most commonly used parameters are listed as presets.

For bit field parameters, you can select either a single bit or the full bit field to add to the **Home** view. With individual bits, the bit state is displayed. Full bit fields are shown in either hexadecimal or binary format.

**Note:** If **Empty** is selected, the parameter is removed from the **Home** view.

- **Display style:** Select how the signal values are displayed. It is possible to use different display types on the same page.
  - **Numeric:** The parameter values are displayed as numbers (see figure 1 below). If there is only one parameter on the page, a bar graph is also displayed.
  - **Gauge/bar:** When there is one parameter on the page, the parameter value is shown as a dial gauge (see picture 3 below). When there are two or three parameters on the same page, the value is displayed as a bar graph (see the slots in figure 2 below).
  - **Graph** 15 minutes, 30 minutes, 1 hour or 24 hours: The parameter value is displayed as a graph within the selected time frame (see the bottom slot in picture 2).

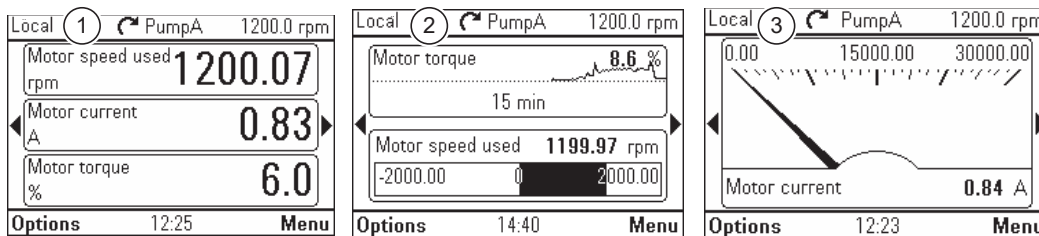


**Note:** The data shown in the graph is not stored in the drive memory, that is, if you remove or restart the control panel, the data is lost.

- **Display decimals:** Specifies how many decimals are shown.
- **Display name:** Enter a custom label to show in the **Home** view instead of the parameter name.
- **Min and Max:** This function depends whether **Scale value range** is selected or not:
  - **Scale value range not selected:** Select the minimum and maximum signal values that are shown on graph displays.
  - **Scale value range selected:** Select the actual values of the parameter that correspond to **Display min as** and **Display max as** (see below).
- **Scale value range:** Select if you want to specify the value range.
  - **Display min as and Display max as:** Select the minimum and maximum values shown in the **Home** view.  
 This feature allows application-specific scaling to be applied.  
 If the parameter value is below the minimum or above the maximum, the text Off the scale is displayed. In the graph format, small arrows are shown instead to indicate values off the scale.

*Scaling with Display signal min/max as and Signal min/max*



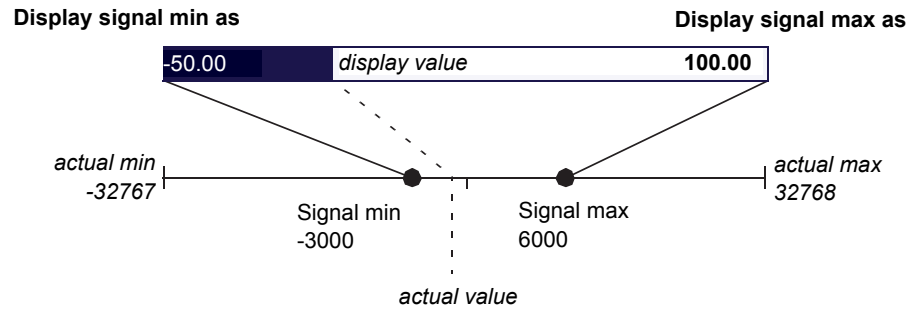

- **Display unit:** Customize the unit shown in **Home** view when scaling is used.
-



# 7

## Control of multiple drives

---

### What this chapter contains

This chapter describes how to control several drives with one control panel.

### Connecting multiple drives to a control panel

1. Connect the control panel (A) to the first drive (B) in the panel bus.
2. Connect the first drive (C) to the second (D), the second to the third, and so on, by daisy chaining RJ-45 leads.

**Note:** Each drive must have a node ID set with drive parameter *49.01 Node ID number*.




The picture shows panel bus example with ACS880-01 drives. The ACX580 and ACX480 drives have dedicated panel bus adapters with two RJ-45 slots.

## Selecting drive menu

In the **Options** menu, select **Select drive** which lists all the drives connected to the panel bus and shows their current status. If panel bus is not enabled, only one drive is shown.




In the panel bus, If the connection to the currently selected drive fails, **Select drive** menu is shown with the other drive list.

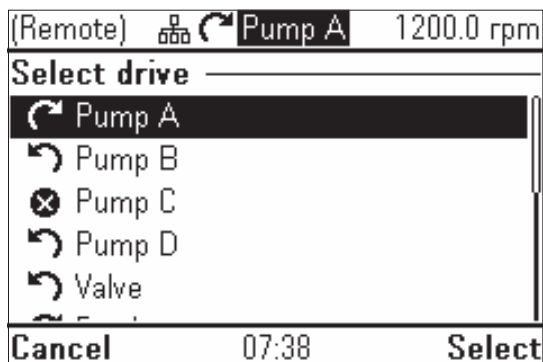In the **Select drive** menu, any drives to which the connection is lost are shown in dimmed text.



### ■ Selecting a drive

If there are multiple drives connected to the same panel bus, you can select which drive to control with the control panel.

1. In the **Options** menu, select **Select drive** to open a list of connected drives.
2. Use  and  to move the cursor. When a drive is highlighted, the green LED on the drive blinks for one second.
3. Press  (**Select**) to change control to the highlighted drive.

## Panel features with multiple drives

### ■ Panel views

In a panel bus configuration, the control panel communicates with one drive at a time. Any information shown on the control panel, such as the status bar or signals in the **Home** view pertain to the currently selected drive. Similarly, the control panel stores data to its memory only from the currently selected drive.

Changes to the **Home** view configuration and any parameter changes are saved in the drive. They can be transferred to other drives using the backup feature.

You can view information on other drives in the panel bus and switch to another drive in the **Select drive** menu.

### ■ The Help page

The content of the Help page is drive-specific, and it always refers to the currently selected drive.

### ■ Graph data

The data for the graph format in the **Home** view is stored in the control panel only for the selected drive. Upon changing the selected drive, any stored graph data is discarded, and graph data collection begins for the new drive.

History graphs and all related settings (signal selection, horizontal timescale) are saved in the drive, and the **History graphs** menu shows always the graphs for the currently selected drive. Data collection takes places independently in each drive.

### ■ Backups

The control panel can store backups from different drives. Conversely, backups from a drive can be uploaded to another drive.

### ■ Customized content

Each drive in the panel bus has its own custom content because all the customizations are stored in the drive.

### ■ Assistants

Assistants are drive-specific, which means that different drives in the panel bus can have different assistants. However, the assistant framework is the same for all assistants in all drives.

---

## Faults and warnings with multiple drives

### ■ Faults and warnings in the currently selected drive



Faults and warnings in the currently selected drive are shown as normal.

### ■ Faults and warnings in other drives


Faults in the other drives in the panel bus appear as remote faults.

Faults that require a restart look like any other remote faults. They are shown normally if you switch to the drive in which the fault has occurred.

In the **Fault** view, the keys have the following functions:

- Press  (**Hide**), to go back to the previous view. The fault view does not reappear as with regular faults.
- Press  (**Switch**), to connect to the faulted drive.

Only active warnings in the selected drive are shown in the control panel. To view warnings in another drive, you must select that drive in the **Select drive** menu.

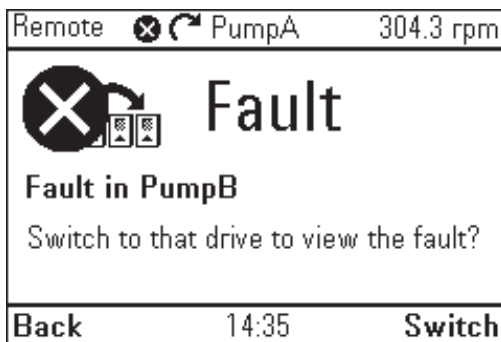

## 8

## Fault tracing

---







### What this chapter contains

This chapter describes how to identify different fault and warning messages that are shown on the control panel and how to solve problem situations.

### Identifying error and warning messages

Faults and warnings are drive states that occur when the drive detects a problem in its operation. The display message, backlight and LED indications help you to identify the problem.







Some of the fault and warning icons and their descriptions are mentioned below.

Event	Icon
Fault activate	
Fault reset	
Warning activate	
Warning deactivate	
Pure event activate	
Pure event deactivate	

Refer to the table below to identify faults and warnings.

---

64 Fault tracing

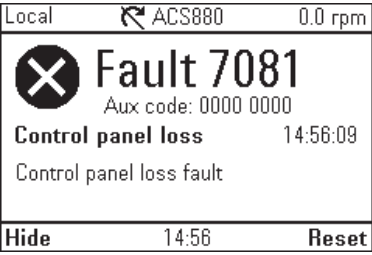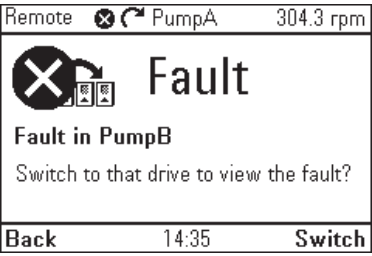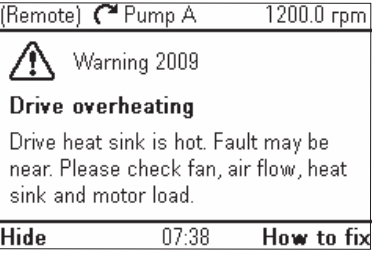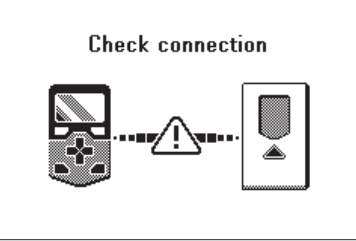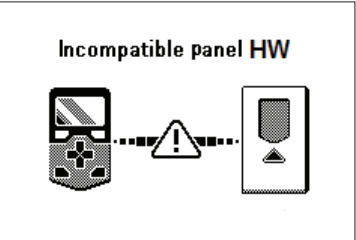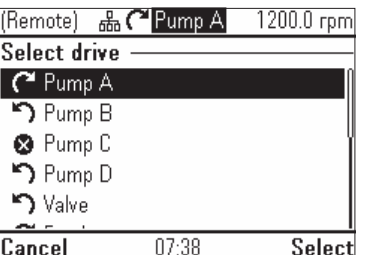
Display	LED	Type
	<p>continuous red</p> <p>blinking red</p>	<p>See <a href="#">Faults (page 65)</a>.</p> <p>Faults of this type require stopping and restarting the drive before it continues to function normally. See <a href="#">Faults (page 65)</a>.</p>
	<p>continuous red</p>	<p>A fault has occurred in another drive in the panel bus.</p>
	<p>blinking green</p>	<p>See <a href="#">Warnings (page 65)</a>.</p>
	<p>continuous green</p>	<p>The connection between the control panel and the drive is faulty. Check that the connection cable is properly attached.</p>
	<p>continuous green</p>	<p>The control panel type is not compatible with the drive you attempt to use it with. See <a href="#">Applicability (page 10)</a>.</p>
	<p>continuous green</p>	<p>The connection between the control panel and the drive has been lost. Check the control panel network connections. Select another drive.</p>






## Faults

 Faults are problems that require your attention before you start the drive again.

Refer the following steps to solve the fault situation:


 
1. Identify and eliminate the cause of the fault. In the **Fault** view, you can see the fault code. Refer to the relevant firmware manual for more information on the fault.
2. Reset the fault by pressing  (**Reset**) in the **Fault** view.

In the **Fault** view, the keys have the following functions:



- Press  (**Hide**) or any of the arrow keys to temporarily hide the fault and go back to the previous view. If there is also an active warning, it is displayed instead. The fault view reappears after 60 seconds if no keys have been pressed.
- Press  (**Reset**) to reset the fault and return to the previous view.
- Press the  key to open the context-sensitive help. The help page has a shortcut to the Fault Diagnostics Assistant which helps you solve the fault situation.

## Warnings

Warnings mean that a possible problem has been detected and may need attention, and the drive can still run. A warning message disappears once the condition that triggered it goes away.

- Press  (**Hide**) to hide the warning message and go back to the previous view. If the warning is still active after 60 seconds of no key presses, the **Warning** view reappears automatically.
- Press the  key to open the context-sensitive help.

**Note:** If multiple warnings are active, the total number of active warnings is displayed.

Use  and  to scroll through the warnings.

---



A large, bold, black number '9' is centered within a light gray square with rounded corners. The square is positioned in the upper right quadrant of the page.

# Maintenance

---

## What this chapter contains

This chapter describes the service and maintenance tasks of the Assistant control panel.

---

## Removing the control panel cover

It is possible to remove the control panel cover to clean any dust inside the cover or to change the cover to customize the control panel.

The cover consists of two parts, both of which can be removed. You do not need tools to remove the covers.

1. Open the USB connector cover.
2. Remove the lower part of the control panel cover.
3. Remove the upper part of the cover.

Reinstall the covers in the reverse order.



## Cleaning the control panel

Use a soft damp cloth to clean the control panel. Avoid harsh cleaners which could scratch the display window.

## Cleaning the connectors

Control panel has two connectors, RJ-45 connector (panel back side) and USB connector (panel front side). Clean outside/around the connectors using suitable cleaning solution (for example, Isopropyl Alcohol (IPA) solution). Do not use the cleaning solution to clean inside the connectors.

## Replacing the battery

The instructions below describe how to replace the battery that powers the real-time clock of the control panel.

1. Turn the lid on the back of the control panel counter-clockwise until the lid opens.
  2. Remove the battery gently.
  3. Replace the battery with a new CR2032 battery. The battery holder has grip nails. First slide the battery and then press on the other side. The battery will snap in.
-

4. Make sure that the battery polarity shows positive on the upside.
5. Put the lid back and tighten it by turning it clockwise.
6. Dispose of the old battery according to local disposal rules or applicable laws.



**Note:** Contact ABB for ZCU-12 (Supply control unit) battery replacement.

## Control panel software updates

If the control panel software needs to be updated, contact ABB.

## Recycling instructions and environmental information

See the drive related Recycling instructions and environmental information.

---



# 10

## Panel-to-PC USB connection

---

### What this chapter contains

This chapter describes the USB connection between the Assistant control panel and a PC.

### USB connection

The three main functions of the USB connection are:

- The control panel acts as an USB adapter, allowing the PC tool to interact with the drive. See [Connecting a PC tool to a drive through the control panel \(page 73\)](#).
- It is possible to transfer data (for example, screenshots and backups) between the control panel and the PC. When connected, the control panel appears as an MTP (Media Transfer Protocol) device on the PC.
- The USB port is intended for temporary service.



**WARNING!**

Use the USB connector gently. Otherwise the connector may break.

Pull the USB connector cable correctly. Avoid pulling the cable in side ways direction.

---

## Connecting control panel to PC USB


**Note:** When connected to a PC, the control panel displays the USB screen and does not respond to key presses. In this mode, you can only interact with the control panel or the drive through the PC tool.

To connect the control panel to a PC,

1. Open the lid of the USB connector.
2. Plug in a USB cable.
3. Connect to a PC.

The control panel displays the USB screen.

The USB connector lid is attached to the panel through a loose rubber band. You can always connect back the lid to the band, if it disconnects accidentally.

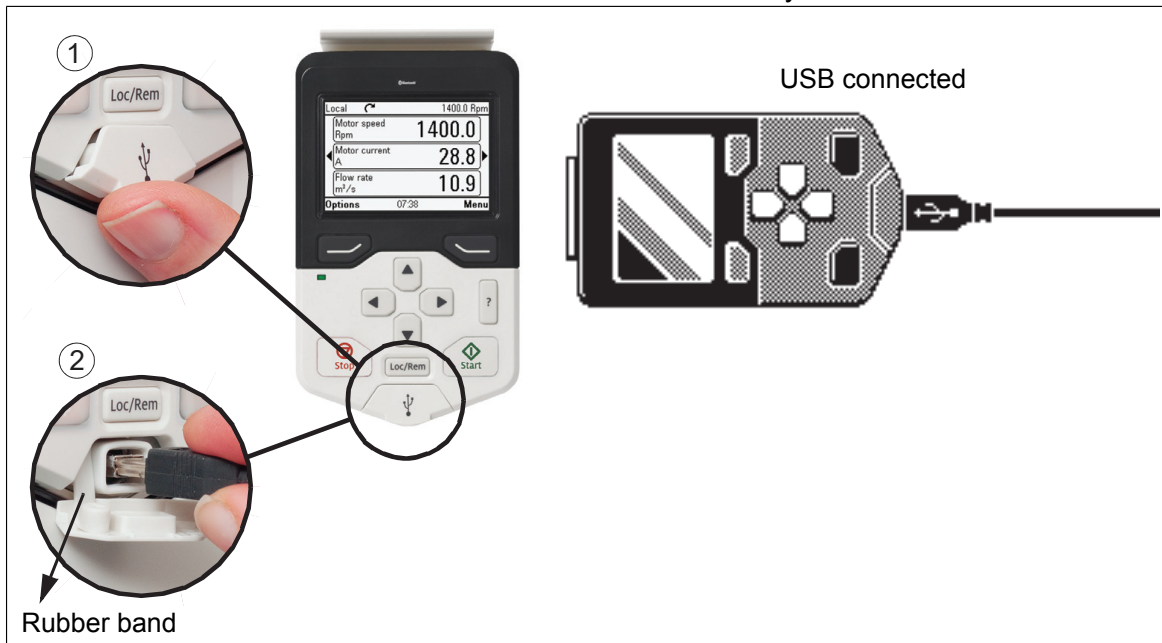



## Connecting a PC tool to a drive through the control panel

You can use the control panel to connect an ABB PC tool to the drive. When using the control panel, you can only access the drive from the PC tool.

1. Install an ABB PC tool to the PC.
2. Connect the control panel to the drive.
3. Connect the control panel to the PC with a USB cable as instructed in [Connecting control panel to PC USB \(page 72\)](#).
4. If Windows prompts you to install USB drivers, install them as instructed in *Drive composer user's manual* (3AUA0000094606 [English]).

The behavior depends on the current control location of the drive. See [Connecting in local control mode \(page 73\)](#) and [Connecting in remote control mode \(page 73\)](#).

### ■ Connecting in local control mode

When you connect the control panel in local control mode to a PC, local control is transferred to the PC tool and the control panel displays the USB screen. The drive retains its present reference and direction.

When you have finished using the PC tool, close the connection through the PC tool first and then disconnect the USB cable. Local control is transferred back to the control panel and the drive retains its present reference and direction.

**Note:** If you disconnect the USB cable before closing the connection, a local loss fault is triggered.

### ■ Connecting in remote control mode

When you connect the control panel in remote control mode to a PC, the control panel displays the USB screen and you can only interact with the control panel through the PC tool. The drive remains in remote control, but you can switch over to local control using the PC tool.

When you disconnect the PC tool, the control panel exits the USB screen and the drive resumes its normal operation.

## Transferring files between the control panel and a PC

1. Connect the control panel to a PC with a USB cable as instructed in [Connecting control panel to PC USB \(page 72\)](#).
  2. If Windows prompts you to install USB drivers, install them as instructed in *Drive composer user's manual* (3AUA0000094606 [English]).  
The control panel appears as an MTP device in Windows Explorer.
  3. Open **ABB Drives Assistant control panel** with Windows Explorer, and go to the directory where the files are stored.
    - Screenshots are stored in: ABB Drives Assistant control panel\ABB Drives Assistant control panel\_a\screen
    - Backup files are stored in: ABB Drives Assistant control panel\ABB Drives Assistant control panel\_a\backup
  4. You can copy files to and from the folders just like any other files with Windows Explorer.
-



# 11

## Technical data

---

### What this chapter contains

This chapter contains the technical details of the Assistant control panel.

### Connectors

The control panel has the following connectors:

Connector	Purpose
RJ-45 female connector	Used for connecting the panel to drive. <ul style="list-style-type: none"> <li>• If cable is used, then maximum length should be 100 meters (328 ft.)</li> <li>• On a panel bus, the combined maximum length of the panel bus cables should be 100 meters (328 ft.).</li> <li>• The panel bus can have a maximum of 32 nodes.</li> </ul>
Type B mini USB connector	Used for connecting panel to PC. It is intended for temporary service use (USB 2.0, MTP protocol). The maximum cable length should be three meters (9.8 ft.).

### Display

The control panel has a monochrome, 240×160 pixel resolution LCD display with adjustable backlight and display contrast.

See [Basic settings and assistants \(page 31\)](#).

### Battery

At an ambient temperature of 25 °C (77 °F), the change interval of the real-time clock battery is approximately 10 years.

Battery type	CR2032
--------------	--------

---

## Dimensions and weight

Weight	130 g
Height, width and depth mm [in.]	<p>The drawing shows two views of the control panel. The front view on the left shows a rectangular device with a screen at the top and a keypad below. Dimensions are indicated: a width of 74 mm [2.9 in.] and a height of 130 mm [5.1 in.]. The side view on the right shows the thickness of the device, which is 26 mm [1.0 in.].</p>

## Degrees of protection

Degree of protection, attached to a drive	IP55
Separately	IP20
When control panels are connected in stand-alone to RJ-45 cable	IP20
When control panels are connected with USB cable.	IP20
Control panel mounted to DPMP-01	IP55
Control panel mounted to DPMP-02 or 03	IP65
When Control panel is not mounted to DPMP-01 or 02 or 03 holder	IP20

Control panel mounted to a drive provides the same protection class as the drive unit itself. For more information, see hardware manual of the drive product.

## Materials

Enclosure	PC/ABS
Packaging	Cardboard
Screen	Polycarbonate
Disposal	Do not dispose the control panel with municipal waste. Check the local regulations for disposal of electronic products. See also, drive related Recycling instructions and environmental information.

## Environmental limits

	<i>Operation</i>	<i>Storage</i>	<i>Transportation</i>
Installation site altitude	4000 m (13123 ft.)	-	-
Air temperature	-20 °C to +55 °C (-4 °F to 131 °F)	-40 °C to +70 °C (-40 °F to 158 °F)	-40 °C to +70 °C (-40 °F to 158 °F)
Relative humidity	95% (non-condensing)		
Temperature inside the panel	-20 °C to +70 °C (-4 °F to 158 °F)	-25 °C to +70 °C (-13 °F to 158 °F)	-

**Note:** Accuracy of real time clock is not good at very high and very low temperatures.

## IEC compliance

	<i>Operation</i>	<i>Transportation</i>
Contamination levels (IEC 60721-3-3, IEC 60721-3-2, IEC 60721-1-3-1)	3C3	
Sinusoidal vibration	61800-5-1 ed 2. EN 60082-2-6 test Fc (1g)	class 2M3 in acc. with EN 60082-2-6
Shock	class 3M4 in acc. with EN 60062-2-27	class 2M2 in acc. with EN 60082-2-27
Free fall	IEC-60068-2-32, drop height 1 m. (3.3 ft.)	-
EMC compliance (EN 61800-3: 2004 +A1: 2012)	IEC 61000-4-2, IEC 61000-4-3, IEC 61000-4-4, IEC 61000-4-6	-

## LCD specifications

LCD type	FSTN, negative transmissive
Operating temperature	-20 °C to +70 °C (-4 °F to 158 °F)
Storage temperature	-40 °C to +80 °C (-40 °F to 176 °F)
Transportation temperature	-40 °C to +80 °C (-40 °F to 176 °F)
Driver	IC UC1698U
ROHS	Compliant
General tolerance	± 0.2

**Note:** Response time of LCD display is slow at/below 0 °C (32 °F).

## Bluetooth interface

Bluetooth standard	Bluetooth 4.0 Dual mode (smart ready), Bluetooth classic, Bluetooth LE (low energy)
Certification	Bluetooth® Qualified Design
Antenna type	Internal inverted-F on PCB

Operating frequency	2.4000...2.4835 GHz
Antenna gain	Maximum 1.7 dBi

## Bluetooth encryption

	Bluetooth classic	Bluetooth LE (low energy)
Encryption algorithm	Custom algorithms based on: <ul style="list-style-type: none"> <li>• SAFER + for key derivation (called E21 and E22)</li> <li>• authentication as message authentication codes (called E1)</li> <li>• payload data encryption (called E0)</li> </ul>	AES
Encryption protocol	E0, E1, E21, E22/ SAFER+	AES
Type	Symmetrical	
Key length	128	
Function	Key derivation, authentication and payload data encryption	

## Bluetooth radio frequency exposure

### ■ Bluetooth (BT)

Operating band [GHz BT]	Frequency [MHz]	Modulation	Data rate [Mbps]	Power level	Transmit power [dBm, conducted]
2.4	2400 to 2483.5	GFSK	1	Maximum	9.3

### ■ Bluetooth Low Energy (BLE)

Operating band [GHz BLE]	Frequency [MHz]	Modulation	Data rate [Mbps]	Power level	Transmit power [dBm, conducted]
2.4	2400 to 2483.5	GFSK	1	Maximum	9.3

## FCC and Industry Canada certifications

The following FCC and Industry Canada certifications compliance identification numbers are valid for ACS-AP-W and ACH-AP-W panels and Bluetooth.

- FCC ID: 2AFNGAPWSERIES
- IC: 20555-APWSERIES

### ■ FCC ID: 2AFNGAPWSERIES

The ACS-AP-W and ACH-AP-W wireless assistant control panels comply with part 15 of the FCC rules.

The operation is subject to the following two conditions:

1. The device may not cause harmful interference, and
  2. The device must accept any interference received, including interference that may cause undesired operation.
-

**Note:** The wireless panels are tested and found to comply with the limits of a Class A digital device, pursuant to part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference when the panels are operated in a commercial environment.

**Note:** The wireless panels will generate, use, and radiate radio frequency energy. If the panels are not installed and used in accordance with the instruction manual, it may cause harmful interference to radio communications. Operation of these panels in a residential area is likely to cause harmful interference in which the user is required to correct the interference at his own expense.

**Note:** Modifications not expressly approved by ABB Oy could void the user's authority to operate the wireless panels.

### ■ IC: 20555-APWSERIES

The ACS-AP-W and ACH-AP-W wireless assistant control panels comply with RSS- 247, Issue 1, 2015-05. The operation is subject to the following two conditions:

1. The device may not cause interference, and
2. The device must accept any interference, including interference that may cause undesired operation of the device.


## Markings

These markings are attached to the panels:

- ACS-AP-W and ACH-AP-W

	<p>CE mark</p> <p>Product complies with the applicable European Union legislation. For fulfilling the requirements of Radio Equipment Directive (RED), see the additional information concerning the panel EMC and RF compliance:</p> <ul style="list-style-type: none"> <li>• IEC/EN 62368-1:2014 + A11:2017</li> <li>• EN 62311:2008</li> <li>• ETSI EN 301 489-1</li> <li>• ETSI EN 301 489-17</li> <li>• IEC/EN 61000-6-2:2019</li> <li>• ETSI EN 300 328</li> </ul>
---	--

- ACS-AP-... and ACH-AP-...

	<p>WEEE mark</p> <p>At the end of life the product should enter the recycling system at an appropriate collection point and not placed in the normal waste stream.</p>
---	--

## Disclaimers

### ■ Generic disclaimer

The manufacturer shall have no obligation hereunder with respect to any product which (i) has been improperly repaired or altered; (ii) has been subjected to misuse, negligence or accident; (iii) has been used in a manner contrary to the Manufacturer's instructions; or (iv)

---

has failed as a result of ordinary wear and tear. All material in this manual is subject to change without a further notice. The manual is intended as non-contractual document.

### ■ **Cybersecurity disclaimer**

This product can be connected to and to communicate information and data via a network interface. The HTTP protocol, which is used between the commissioning tool (Drive Composer) and the product, is an unsecured protocol. For independent and continuous operation of product such connection via network to commissioning tool is not necessary. However it is Customer's sole responsibility to provide and continuously ensure a secure connection between the product and Customer network or any other network (as the case may be). Customer shall establish and maintain any appropriate measures (such as but not limited to the installation of firewalls, prevention of physical access, application of authentication measures, encryption of data, installation of anti-virus programs, etc) to protect the product, the network, its system and the interface against any kind of security breaches, unauthorized access, interference, intrusion, leakage and/or theft of data or information.

Notwithstanding any other provision to the contrary and regardless whether the contract is terminated or not, ABB and its affiliates are under no circumstances liable for damages and/or losses related to such security breaches, any unauthorized access, interference, intrusion, leakage and/or theft of data or information.

---



---

# Further information

## **Product and service inquiries**

Address any inquiries about the product to your local ABB representative, quoting the type designation and serial number of the unit in question. A listing of ABB sales, support and service contacts can be found by navigating to [www.abb.com/searchchannels](http://www.abb.com/searchchannels).

## **Product training**

For information on ABB product training, navigate to [new.abb.com/service/training](http://new.abb.com/service/training).

## **Providing feedback on ABB manuals**

Your comments on our manuals are welcome. Navigate to [new.abb.com/drives/manuals-feedback-form](http://new.abb.com/drives/manuals-feedback-form).

## **Document library on the Internet**

You can find manuals and other product documents in PDF format on the Internet at [www.abb.com/drives/documents](http://www.abb.com/drives/documents).



[www.abb.com/drives](http://www.abb.com/drives)



3AUA0000085685F